ORDER NO. MD0503109C3

Service Manual

Active Subwoofer System

SB-WA840GC / SB-WA840GCT

Colour

(S)... Silver Type

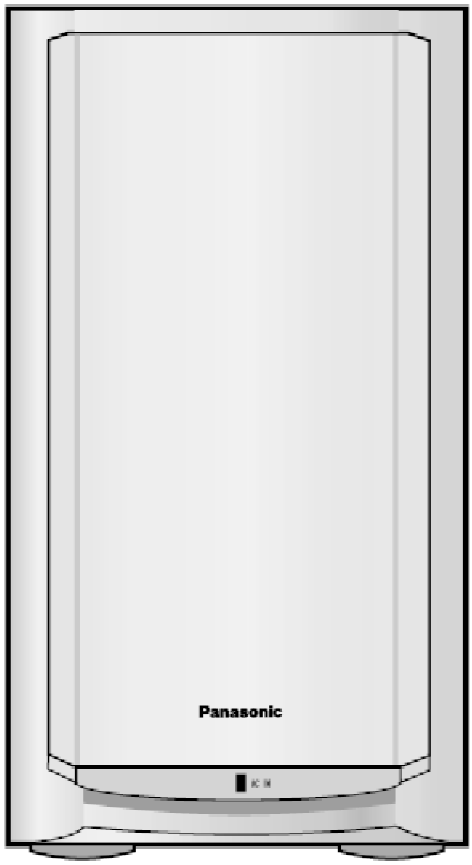

SB-WA840

SPECIFICATIONS

Specification

■ **Active subwoofer**

Type	**1 way, 2 speaker system, Bass reflex**
Speaker unit(s)	**Impedance 4 Ω**
1. Woofer	**13 cm Cone type**
2. Woofer	**13 cm Cone type**
Output sound pressure	**80 dB/W (1.0 m)**
Frequency range	**40 Hz-220 Hz (-16 dB)**
	45 Hz-180 Hz (-10 dB)
Dimensions (W x H x D)	**201.5 mm x 368.2 mm x 491.5 mm**
Mass	**11.3 kg**

■ **General**

Power supply	**AC 110/127/220-230/240 V, 50/60Hz**
Power consumption	**340 W**

Note :

Specifications are subject to change without notice.

Mass and dimensions are approximate.

■ **System : SC-HT840(GCT)**	**Music Center : SA-HT840(GCT)**
	Satellite Speakers : SB-HT840(GC)
	Active Subwoofer : SB-WA840(GCT)
■ **System : SC-HT840(GC)**	**Music Center : SA-HT840(GC)**
	Satellite Speakers : SB-HT840(GC)
	Active Subwoofer : SB-WA840(GC)
■ **System : SC-HT840(GS)**	**Music Center : SA-HT840(GS)**
	Satellite Speakers : SB-HT840(GC)
	Active Subwoofer : SB-WA840(GC)

SB-HT840GC-S

Front Speaker	SB-FS842GC-S
Center Speaker	SB-PC841GC-S
Surround Speaker	SB-FS843GC-S

© 2005 Matsushita Electric Industrial Co. Ltd.. All rights reserved.
Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public.
It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

1. Safety Precautions

1.1. GENERAL GUIDELINES

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, ensure that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, check for leakage current to prevent from being exposed to shock hazards.

1.1.1. LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Using an ohmmeter measure the resistance value, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 1M Ω and 5.2 Ω . / When the exposed metal does not have a return path to the chassis, the reading must be ∞ .

Fig. 1

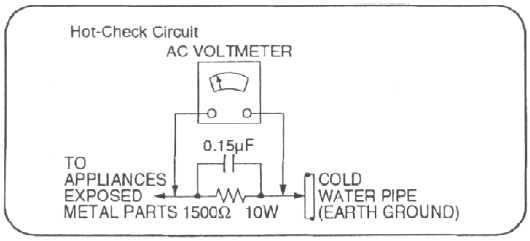

1.1.2. LEAKAGE CURRENT HOT CHECK (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 1.5k Ω , 10 watts resistor, in parallel with a 0.15 μ F capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at

each point.

5. **Reverse the AC plug in the AC outlet and repeat each of the above measurements.**
6. **The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. Should measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.**

2. Before Use

Be sure to disconnect the mains cord before adjusting the voltage selector. Use a minus (-) screwdriver to set the voltage selector (on the rear panel) to the voltage setting for the area in which the unit will be used.
(If the power supply in your area is 117V or 120V, set to the "127V" position.)
Note that this unit will be seriously damaged if this setting is not made correctly. (There is no voltage selector for some countries; the correct voltage is already set.)

3. Before Repair and Adjustment

Disconnect AC power, discharge Power Supply Capacitors C546~C549 through a 10 Ω, 1 W resistor to ground.
DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.
After repairs are completed, restore power gradually using a variac, to avoid overcurrent.
Current consumption at AC 100/110 V, 50/60 Hz in NO SIGNAL mode should be ~835 mA and
Current consumption at AC 230-240 V, 50 Hz in NO SIGNAL mode should be ~420 mA.

4. Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.

- Stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.
If this occurs, follow the procedure outlines below:

1. Turn off the power.

2. Determine the cause of the problem and correct it.

3. Turn on the power once again after one minute.

Note:
When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

5. Handling the Lead-free Solder

5.1. About lead free solder (PbF)

Distinction of PbF P.C.B. :

P.C.B.s (manufactured) using lead free solder will have a PbF stamp on the P.C.B.

Caution:

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 - 70°F (30 - 40°C) higher. / Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700 ± 20°F (370 ± 10°C).

- Pb free solder will tend to splash when heated too high (about 1100°F/600°C).

- When soldering or unsoldering, please completely remove all of the solder on the pins or solder area, and be sure to heat the soldering points with the Pb free solder until it melts enough.

6. Connection of the Speaker Cables

- Be sure to connect speaker cables before connecting the AC power supply cord.

- The load impedance of any speaker used with this unit must be 4 Ω .

- Be sure to connect the cable from the right speaker to the right terminal and the cable from the left speaker to the left terminal.

1. Strip off the outer covering, and twist the center conductor. Make sure the bare ends of the wires are not unravelled. (If they are, twist them tight again.)

2. Insert the wire to the rear panel of the unit and close the lever.

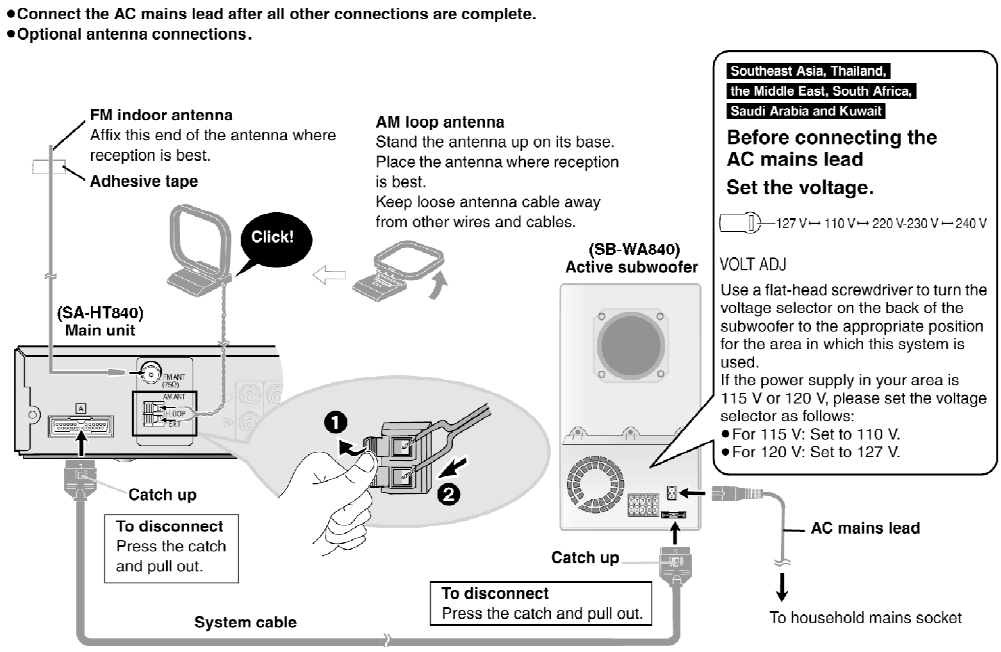
●Connect the AC mains lead after all other connections are complete.
●Optional antenna connections.
FM indoor antenna
Affix this end of the antenna where reception is best.
Adhesive tape
AM loop antenna
Stand the antenna up on its base.
Place the antenna where reception is best.
Keep loose antenna cable away from other wires and cables.
Click!
(SA-HT840)
Main unit
(SB-WA840)
Active subwoofer
Catch up
To disconnect
Press the catch and pull out.
System cable
Catch up
To disconnect
Press the catch and pull out.
AC mains lead
To household mains socket
Southeast Asia, Thailand, the Middle East, South Africa, Saudi Arabia and Kuwait
Before connecting the AC mains lead
Set the voltage.
127 V 110 V 220 V-230 V 240 V
VOLT ADJ
Use a flat-head screwdriver to turn the voltage selector on the back of the subwoofer to the appropriate position for the area in which this system is used.
If the power supply in your area is 115 V or 120 V, please set the voltage selector as follows:
●For 115 V: Set to 110 V.
●For 120 V: Set to 127 V.

7. Disassembly Procedure

“ATTENTION SERVICER”

Some chassis components may have sharp edges.
Be careful when disassembling and servicing.

1. **This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.**
2. **For reassembly after operation checks or replacement, reverse the respective procedures.**
   Special reassembly procedures are described only when required.
3. **Select items from the following index when checks or replacement are required.**

   - **Disassembly of the Front Panel Unit**
   - **Disassembly of the Woofer 1**
   - **Disassembly of the Woofer 2**
   - **Disassembly of the Power Amp Unit**
   - **Disassembly of the Rear Panel and Fan Unit**
   - **Disassembly and checking of the AC Inlet P.C.B., Power P.C.B. and Transformer P.C.B.**
   - **Replacement of Power IC and Transistor**

7.1. Disassembly flow chart

The following chart is the procedure for disassembling the casing and inside parts for internal inspection when carrying out the servicing.
To assemble the unit, reverse the steps shown in the chart below.

7.1.1. Disassembly of Front Panel Assembly

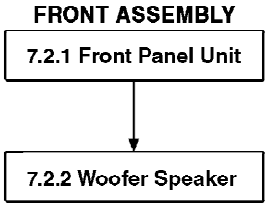

7.1.2. Disassembly of Rear Assembly

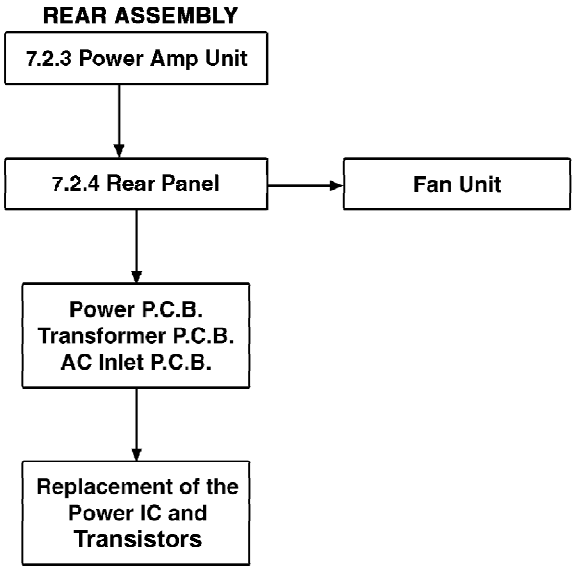

7.2. Disassembly of the Speaker Unit and Checking of the P.C.B.

7.2.1. Disassembly of the Front Panel Unit

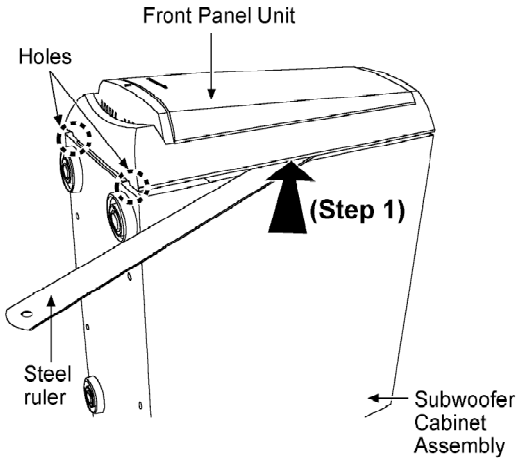

Step 1: Slot in a steel ruler to give a gap between the Front Panel Unit and the Subwoofer

Cabinet Assembly as arrow shown.

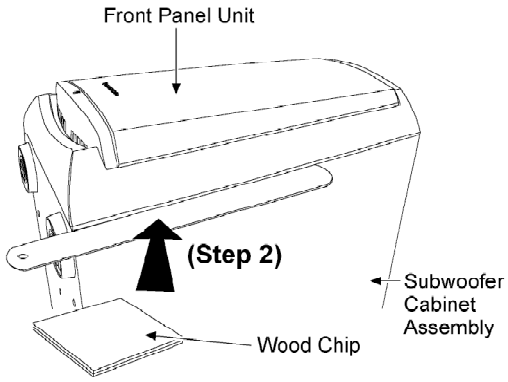

Steps 2: Slot a piece of wood chip in between the Front Panel Unit and the steel ruler as arrow shown.

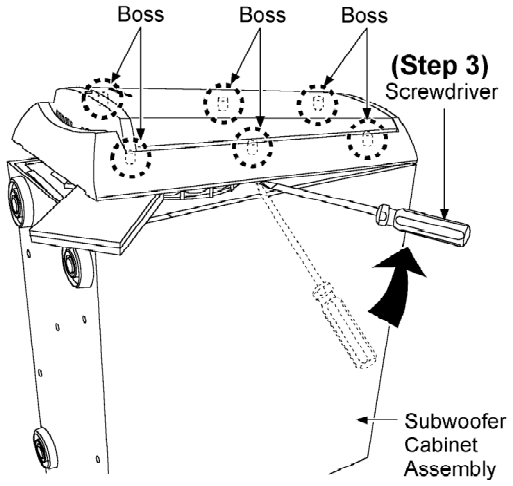

Step 3: Use the screwdriver to slightly lift up the Front Panel Unit as arrow shown.
Note:
Be careful with the bosses which are glued to the Subwoofer Cabinet Assembly.

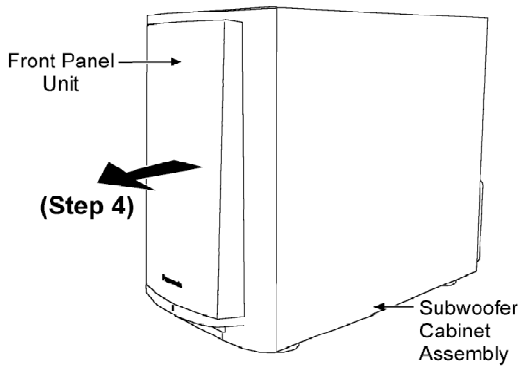

Step 4: Remove the Front Panel Unit from the Subwoofer Cabinet Assembly.

- Assembly of the Front Panel Unit.

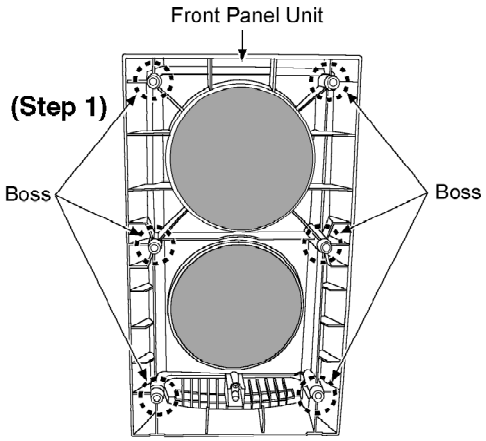

Step 1: Clean up all the glue at the 6 Boss points and replace with the normal glue.

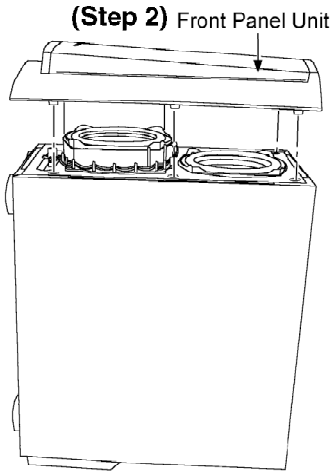

Step 2: Replace the Front Panel Unit firmly back to the cabinet.

7.2.2. Disassembly of the Woofer Speaker 1

Follow Step (1) to Step (4) described in section 7.2.1.

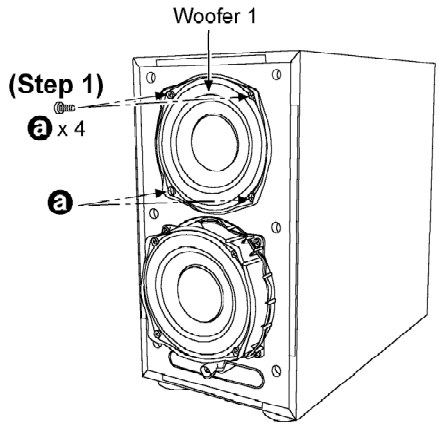

Step 1: Remove 4 screws from the Woofer 1.

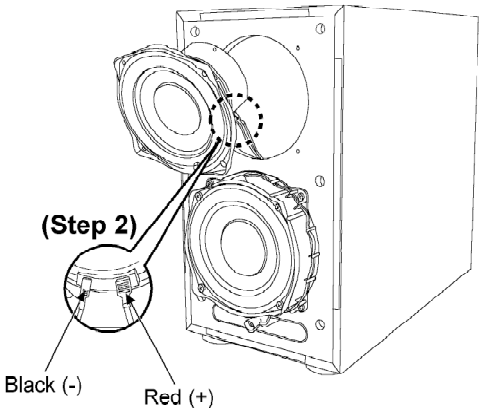

Step 2: Remove the Woofer 1 by detaching the (+) and (-) wires.

7.2.3. Disassembly of the Woofer Speaker 2

Follow Step (1) to Step (4) described in section 7.2.1.

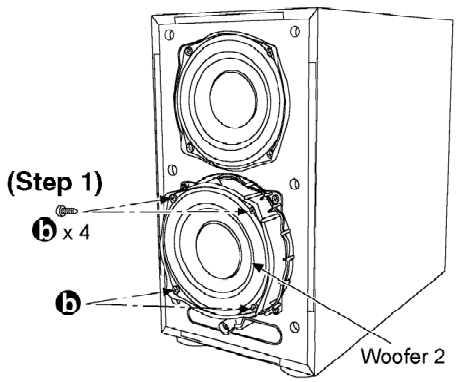

Step 1: Remove 4 screws from the Woofer 2.

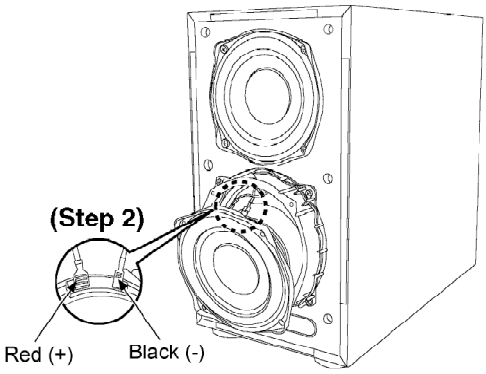

Step 2: Remove the Woofer 2 by detaching the (+) and (-) wires.

7.2.4. Disassembly of the Power Amp Unit

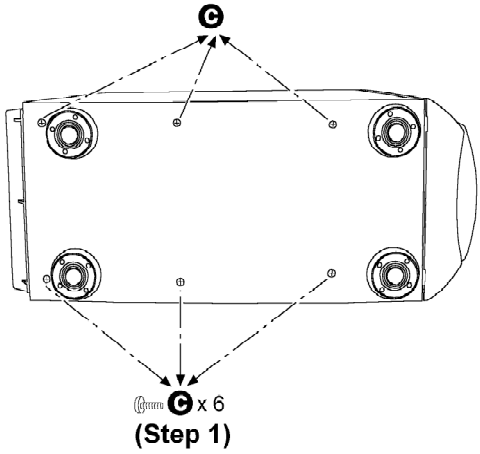

Step 1: Lay the speaker unit as shown. Remove 6 screws from the bottom of the woofer unit.

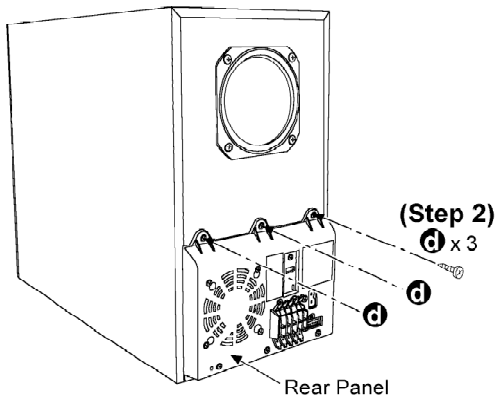

Step 2: Remove 3 screws from the rear panel.

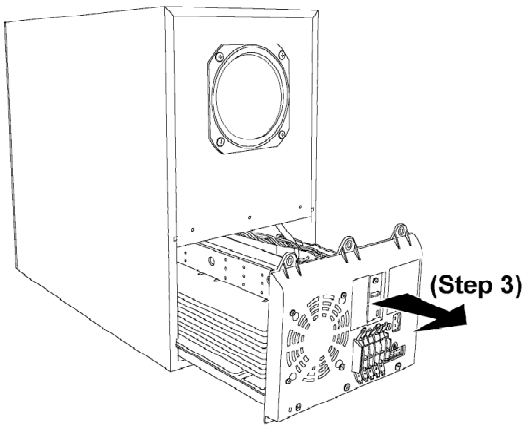

Step 3: Pull out the Power Amp Unit slightly as shown.

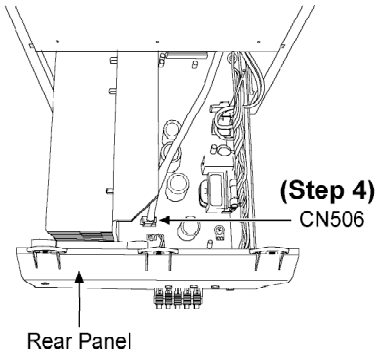

Step 4: Disconnect connector CN506.

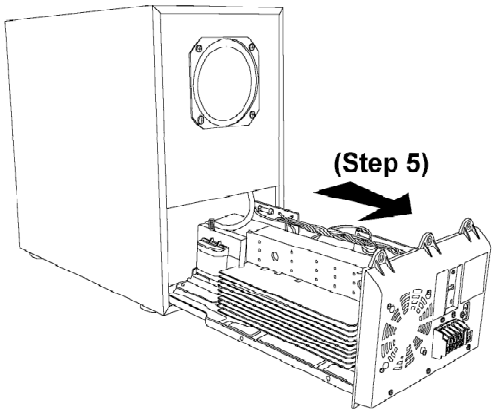

Step 5: Pull out the entire Power Amp Unit.

7.2.5. Disassembly of the Rear Panel and Fan Unit

Follow Step (1) to Step (5) described in section 7.2.4.

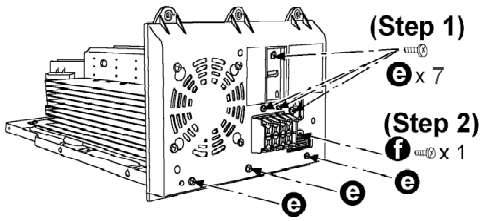

Step 1 & 2: Remove 8 screws from the rear panel.

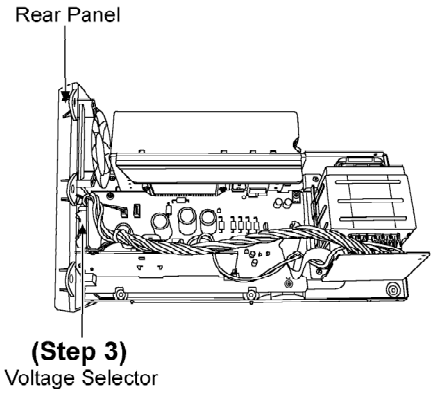

Step 3: Disconnect the Voltage Selector from The Rear Panel.

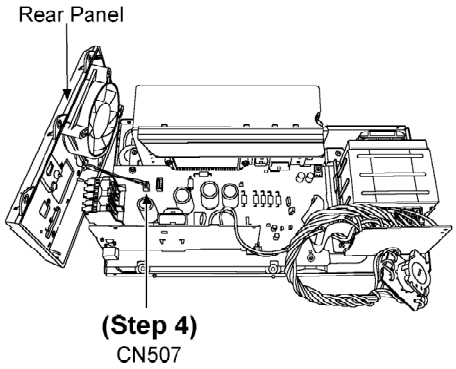

Step 4: Disconnect the connector (CN507) to detach the rear panel.

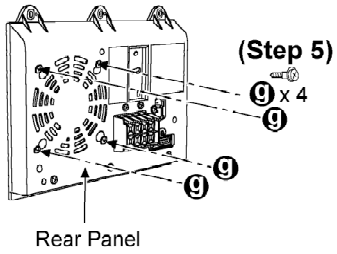

Step 5: Remove 4 screws from the rear panel.

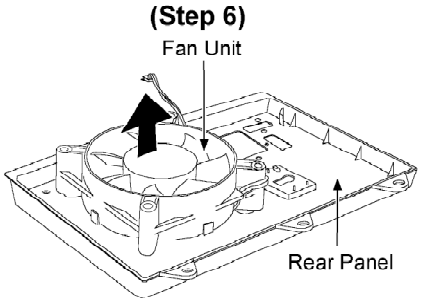

Step 6: Lay the rear panel and remove the Fan Unit as arrow shown.

7.2.6. Disassembly and checking of the AC Inlet P.C.B., Power P.C.B. and Transformer P.C.B.

Follow Step (1) to Step (5) described in section 7.2.4.
Follow Step (1) to Step (4) described in section 7.2.5.

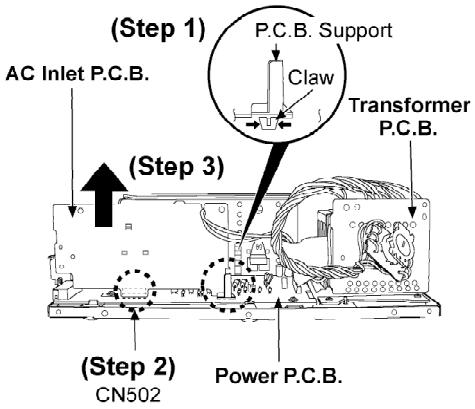

Step 1: Remove the P.C.B. support by pushing the claws as arrow shown.
Step 2: Disconnect the connector (CN502).
Step 3: Lift up the AC Inlet P.C.B. as arrow shown.

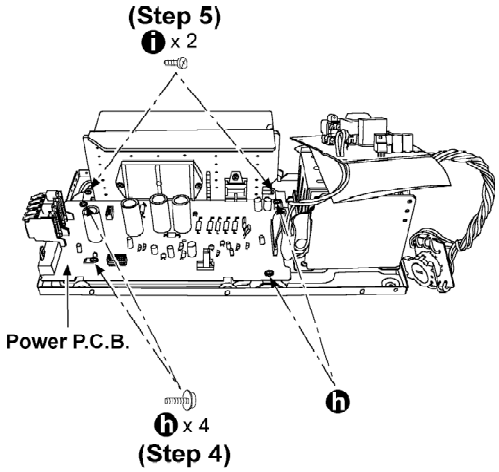

Step 4 & 5: Remove 6 screws.

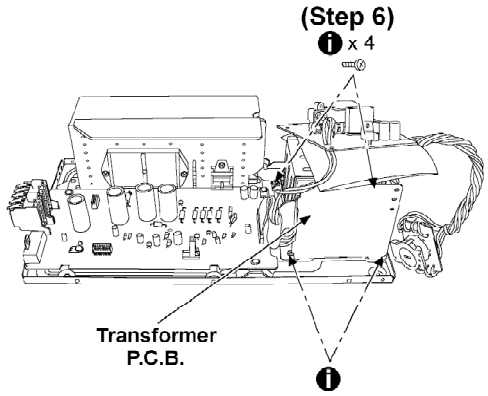

Step 6: Remove 4 screws.

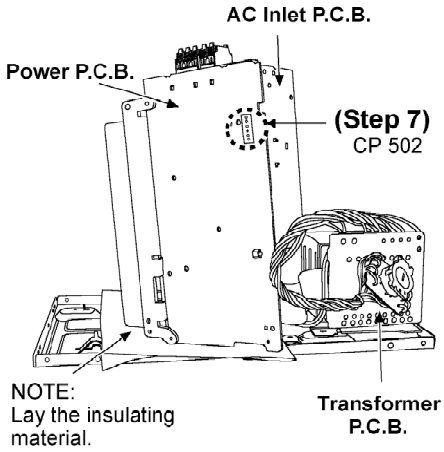

Step 7: Connect back the connector CP502 between Power and AC Inlet P.C.B. for checking.

7.2.7. Replacement of Power IC and Transistor

Follow Step (1) to Step (5) described in section 7.2.4.
Follow Step (1) to Step (4) described in section 7.2.5.

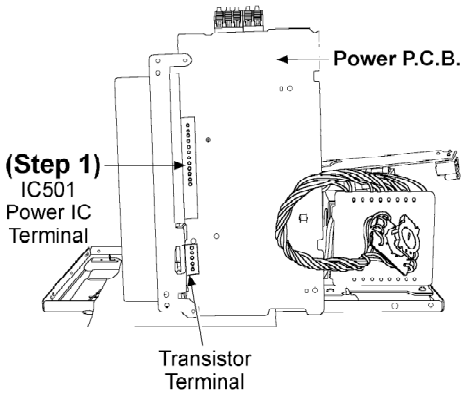

Step 1: Desolder the Power IC and Transistor terminal.

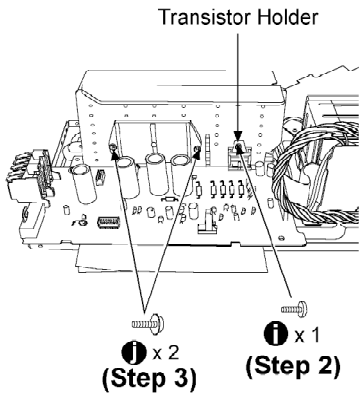

Step 2: Remove 2 screws and Power IC501.
Step 3: Remove the screw and Transistor holder.

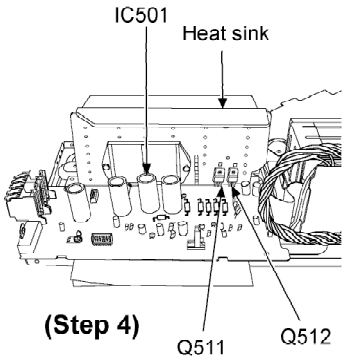

Step 4: Detach the Power IC and Transistor from Heat sink.

8. Voltage Measurement and Waveform Chart

Note:

- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard.
Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

- Circuit voltage and waveform described herein shall be regarded as reference information when probing defect point because it may differ from actual measuring value due to difference of Measuring instrument and its measuring condition and product itself.

8.1. Voltage Measurement

8.2. Waveform Chart

9. Block Diagram

10. Notes of Schematic Diagram

(All schematic diagrams may be modified at any time with the development of the new technology)

Note:

- The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Accordingly, there may arise

some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

- Importance safety notice :

Components identified by ⚠ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

Caution !

IC, LSI and VLSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminium foil.
- Put a conductive mat on the work table.
- Ground the soldering iron.
- Do not touch the pins of IC, LSI or VLSI with fingers directly.

11. Schematic Diagram

11.1. Power Circuit

11.2. Transformer Circuit, AC Inlet Circuit and Voltage Selector Circuit

12. Printed Circuit Board

12.1. Power P.C.B.

12.2. AC Inlet P.C.B., Transformer P.C.B. and Voltage Selector P.C.B.

13. Wiring Connection Diagram

14. Illustration of ICs, Transistors and Diodes

15. Parts Location and Replacement Parts List

Notes:

- Important safety notice:

Components identified by ⚠ mark have special characteristics important for safety.
Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low noise (resistors), etc are used.

When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list.

- The parenthesized indications in the Remarks columns specify the areas or colour. (Refer to the cover page for area or colour) Parts without these indications can be used for all areas.

- Capacitor values are in microfarads (μ F) unless specified otherwise, P= Pico-farads (pF), F= Farads.

- Resistance values are in ohms, unless specified otherwise, 1K= 1,000 (OHM).

- The marking (RTL) indicates that the Retention Time is limited for this items. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of a availability is dependent on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

- [M] Indicates in the Remarks columns indicates parts supplied by PAVCSG.

15.1. Cabinet

15.1.1. Cabinet Parts Location

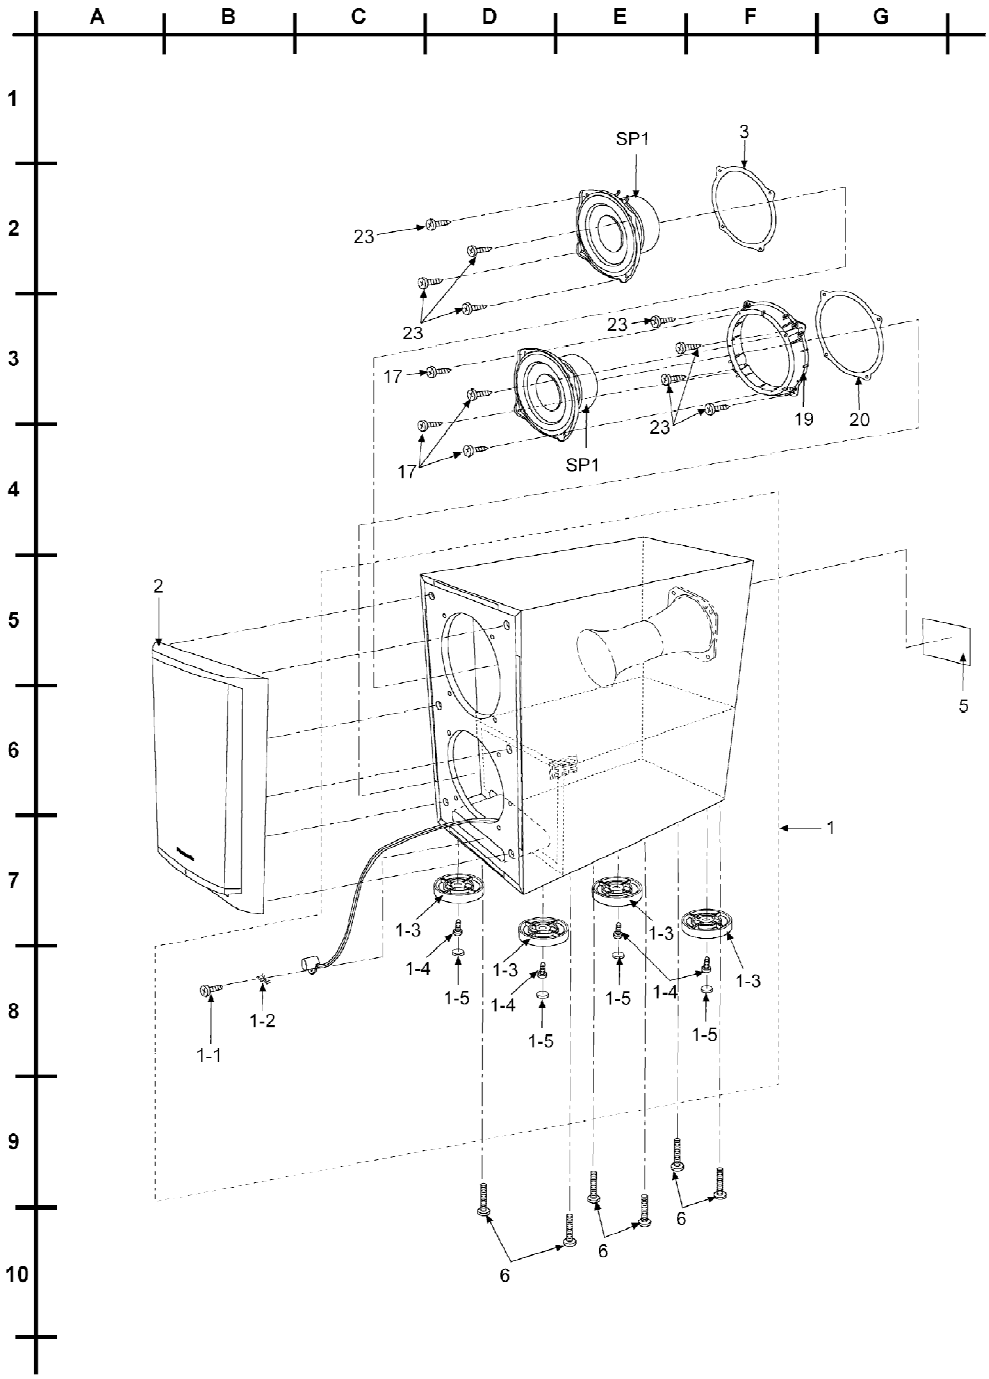
A
B
C
D
E
F
G
1
2
3
4
5
6
7
8
9
10
SP1
3
23
23
23
23
17
17
SP1
19
20
2
5
1
1-1
1-2
1-3
1-4
1-5
1-3
1-4
1-5
1-3
1-4
1-5
1-3
1-5
6
6
6

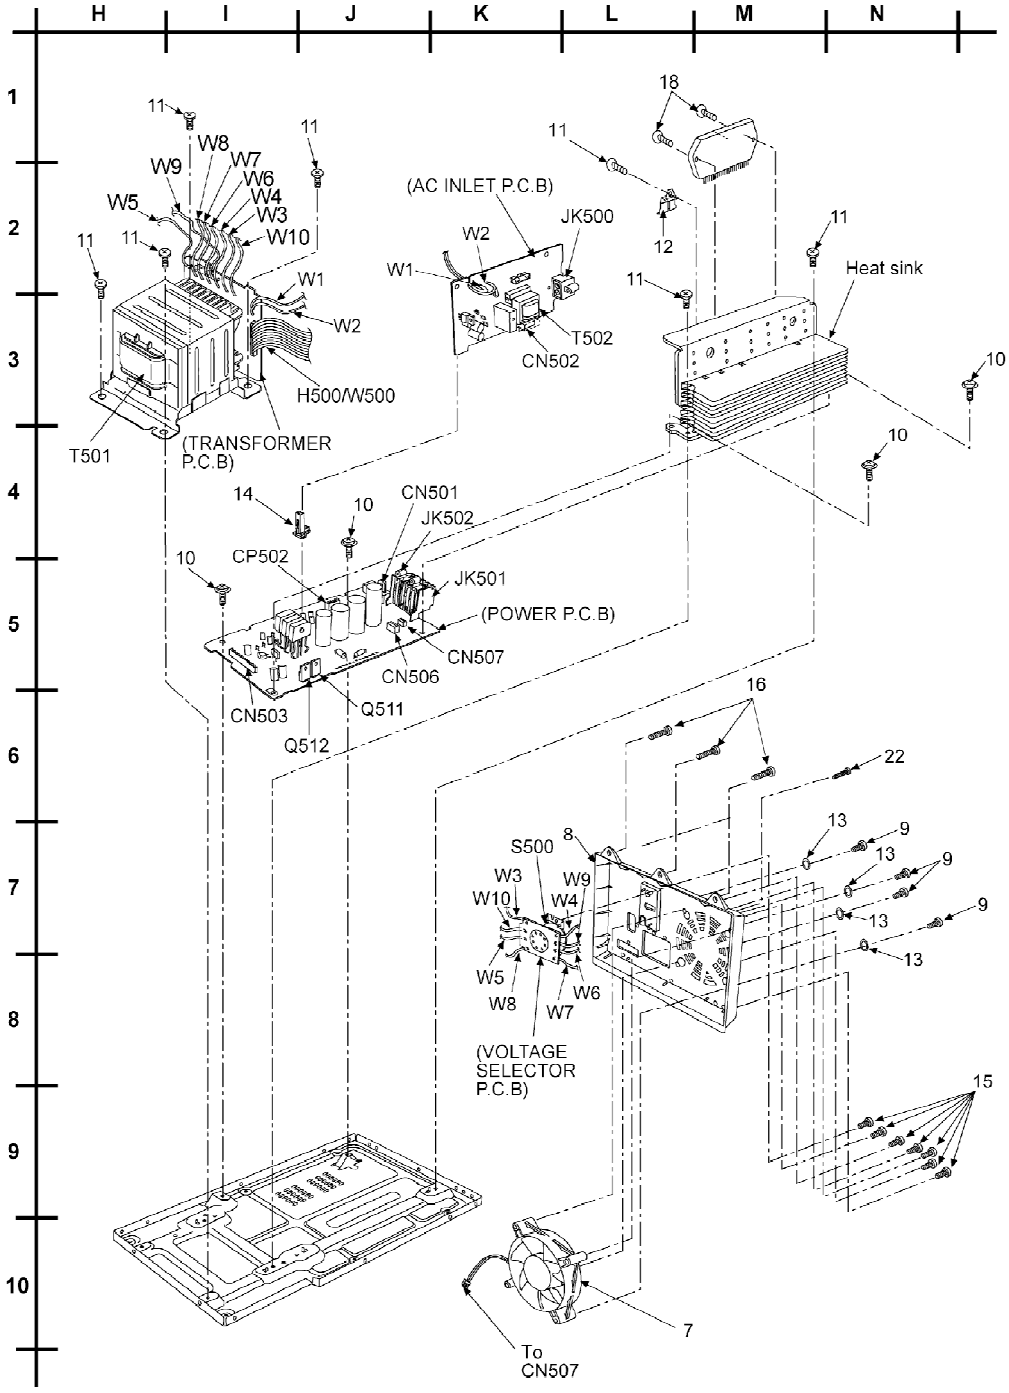

15.1.2. Cabinet Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	RFKHBWA730PP	SUB WOOFER CAB ASS'Y	[M]
1-1	XTB3+12GFJ	SCREW	[M]
1-2	B3AAA0000583	LED (RED)	[M]
1-3	RGKX0284-H	LEG	[M]
1-4	XTB4+12AFJ	WOOD SCREW (TBZP)	[M]
1-5	RKAX0019-KJ	LEG CUSHION	[M]
2	RYQX0167A-S	FRONT PANEL UNIT	[M]
3	RMQX0106	EVA PACKING (WOOFER)	[M]
5	RGNX0277D-S	SPEC LABEL	[M]GC
5	RGNX0277E-S	SPEC LABEL	[M]GCT
6	XTS4+16JFJ	SCREW (TBZP)	[M]
7	REM0072-4	FAN	[M]
8	RGRX0040G-H	REAR PANEL	[M]
9	RHD30065-1S	SCREW (TBZP)	[M]
10	RHD30090-1	SCREW	[M]
11	RHD30119	SCREW	[M]
12	RMC0158-S2	TR-FIXTURE	[M]
13	RMG0606-K	FAN INSULATOR	[M]
14	RMN0203	PCB HOLDER	[M]
15	XTB3+10JFJ	SCREW	[M]
16	XTB3+16AFJ	SCREW (TBZP)	[M]
17	XTB4+10GFJ	SCREW (TBZP)	[M]
18	XTW3+15TFJ	SCREW (TBZP)	[M]
19	RGPX0174	WOOFER SPACER	[M]
20	RMQX0108	EVA PACKING (WOOFER SPACER)	[M]
22	XTN26+10JFJ	SCREW	[M]
23	XTB4+15AFJ	SCREW (TBZP)	[M]

15.2. Electrical Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PRINTED CIRCUIT BOARD	
	REPX0482B	POWER P.C.B./ AC INLET P.C.B./TRANSFORMER P.C.B./ VOLTAGE SELECTOR P.C.B.	[M] RTL
		INTEGRATED CIRCUITS	
IC501	RSN311W64D-P	IC HIC (PBF)	[M]
		TRANSISTORS	
Q501	B1AACF000089	TRANSISTOR	[M]
Q502	B1AACF000089	TRANSISTOR	[M]
Q503	B1AACF000089	TRANSISTOR	[M]
Q505	B1AACF000089	TRANSISTOR	[M]
Q506	B1GCCFJJ0015	TRANSISTOR	[M]
Q511	B1BACG000036	TRANSISTOR	[M]
Q512	B1BCCG000021	TRANSISTOR	[M]
Q515	B1AACF000089	TRANSISTOR	[M]
Q516	B1GACFJJ0016	TRANSISTOR	[M]
Q517	B1BACG000036	TRANSISTOR	[M]
Q518	B1AAGC000007	TRANSISTOR	[M]
Q519	B1AACF000089	TRANSISTOR	[M]
Q520	B1GCCFJJ0015	TRANSISTOR	[M]
Q552	B1ACCF000063	TRANSISTOR	[M]
Q553	2SD0592ARA	TRANSISTOR	[M]
Q554	B1ACCF000063	TRANSISTOR	[M]
Q555	2SD0592ARA	TRANSISTOR	[M]
Q556	B1ACCF000063	TRANSISTOR	[M]
Q557	2SD0592ARA	TRANSISTOR	[M]
		DIODES	
D500	B0AACK000004	DIODE	[M]
D501	B0JAPG000019	DIODE	[M]
D502	B0JAPG000019	DIODE	[M]
D503	MA2C700A0F	DIODE	[M]
D504	B0AACK000004	DIODE	[M]
D508	B0AACK000004	DIODE	[M]
D509	B0BA5R100013	DIODE	[M]
D510	B0BA5R600016	DIODE	[M]
D511	B0HARM000017	DIODE	[M]
D512	B0HARM000017	DIODE	[M]
D513	B0HARM000017	DIODE	[M]
D514	B0HARM000017	DIODE	[M]
D515	B0EAKM000122	DIODE	[M]
D516	B0EAKM000122	DIODE	[M]
D517	B0HARM000017	DIODE	[M]
D518	B0HARM000017	DIODE	[M]
D525	B0BA7R000005	DIODE	[M]
D527	B0EAKM000122	DIODE	[M]
D528	B0EAKM000122	DIODE	[M]
D529	MA2C700A0F	DIODE	[M]
D530	B0EAKM000122	DIODE	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
D534	B0AACK000004	DIODE	[M]
D555	B0AACK000004	DIODE	[M]
D556	B0BA01100004	DIODE	[M]
D557	B0EAKM000117	DIODE	[M]
D558	B0AACK000004	DIODE	[M]
D559	B0AACK000004	DIODE	[M]
D560	B0AACK000004	DIODE	[M]
D561	B0BA01100004	DIODE	[M]
D562	B0AACK000004	DIODE	[M]
D563	B0BA01900005	DIODE	[M]
D564	B0BA01900005	DIODE	[M]
D565	B0BA01900005	DIODE	[M]
D566	B0BA01900005	DIODE	[M]
		SWITCHES	
S500	K0AFZA000005	VOLTAGE SELECTOR	[M] ⚠
		CONNECTORS	
CN501	K1FB125B0095	SYSTEM CONNECTOR	[M]
CN502	K1KB07B00020	7P CONNECTOR	[M]
CN503	RJT119W12V	12P CONNECTOR	[M]
CN506	K1KA04A00105	4P CONNECTOR	[M]
CN507	K1KA02A00008	2P CONNECTOR	[M]
CP502	K1KA07A00123	7P CONNECTOR	[M]
T501	G4C7AGK00006	POWER TRANSFORMER	[M] ⚠
T502	G4C2AAJ00005	BACK-UP TRANSFORMER	[M] ⚠
		COMPONENT COMBINATION	
Z501	ERZV10V511CS	ZENER	[M] ⚠
		SPEAKER	
SP1	EAS13PL21A	SPEAKER UNIT	[M]
		RELAY	
RLY501	K6B1AEA00003	POWER RELAY	[M] ⚠
		FUSES	
F1	K5D402BK0007	4A FUSE	[M] ⚠
F2	K5D202BK0005	250V 2A FUSE	[M] ⚠
		FUSE HOLDERS	
FC501	EYF52BCY	FUSE HOLDER	[M]
FC502	EYF52BCY	FUSE HOLDER	[M]
FC503	EYF52BCY	FUSE HOLDER	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
FC504	EYF52BCY	FUSE HOLDER	[M]
		FUSE PROTECTOR	
FP1	K5G502AA0002	5A FUSE PROTECTOR	[M] ⚠
		HOLDERS	
H500	K1YF12000002	12P WIRE HOLDER	[M]
		JACKS	
JK500	K2AA2B000009	JK AC OUTLET	[M] ⚠
JK501	K4BC06B00055	JK SPEAKER TERMINAL	[M]
JK502	K4BC04B00107	JK SPEAKER	[M]
		EARTH TERMINAL	
E500	K4CZ01000027	TERMINAL	[M]
E501	K4CZ01000027	TERMINAL	[M]
		WIRES	
W1	REEX0459	PRIMARY WIRE (BROWN)	[M]
W2	REEX0458	PRIMARY WIRE (BLUE)	[M]
W3	REEX0479	PRIMARY WIRE	[M]
W4	REEX0472	PRIMARY WIRE	[M]
W5	REEX0477	PRIMARY WIRE	[M]
W6	REEX0474	PRIMARY WIRE	[M]
W7	REEX0475	PRIMARY WIRE	[M]
W8	REEX0476	PRIMARY WIRE	[M]
W9	REEX0473	PRIMARY WIRE	[M]
W10	REEX0478	PRIMARY WIRE	[M]
W500	REXX0452	WIRE	[M]
		RESISTORS	
R401	ERDS2TJ224T	220K 1/4W	[M]
R402	ERDS2TJ102T	1K 1/4W	[M]
R501	ERDS2TJ472T	4.7K 1/4W	[M]
R502	ERDS2TJ472T	4.7K 1/4W	[M]
R503	ERDS2TJ153T	15K 1/4W	[M]
R504	ERDS2TJ153T	15K 1/4W	[M]
R505	ERDS2TJ153T	15K 1/4W	[M]
R506	ERDS2TJ153T	15K 1/4W	[M]
R507	ERDS2TJ392T	3.9K 1/4W	[M]
R508	ERDS2TJ392T	3.9K 1/4W	[M]
R509	ERDS2TJ472T	4.7K 1/4W	[M]
R510	ERDS2TJ472T	4.7K 1/4W	[M]
R511	ERDS2TJ153T	15K 1/4W	[M]
R512	ERDS2TJ153T	15K 1/4W	[M]
R513	ERDS2TJ563T	56K 1/4W	[M]
R514	ERDS2TJ563T	56K 1/4W	[M]
R515	ERDS2TJ563T	56K 1/4W	[M]

[illegible]	[illegible]	[illegible]	[illegible]

Ref. No.	Part No.	Part Name & Description	Remarks
R516	ERDS2TJ563T	56K 1/4W	[M]
R517	ERDS2TJ563T	56K 1/4W	[M]
R518	ERDS2TJ563T	56K 1/4W	[M]
R519	ERDS2TJ824T	820K 1/4W	[M]
R520	ERDS2TJ223T	22K 1/4W	[M]
R521	ERDS2TJ103T	10K 1/4W	[M]
R522	ERDS2TJ273T	27K 1/4W	[M]
R523	ERDS2TJ124T	120K 1/4W	[M]
R524	ERDS2TJ124T	120K 1/4W	[M]
R525	ERDS2TJ154T	150K 1/4W	[M]
R526	ERDS2TJ124T	120K 1/4W	[M]
R527	ERDS2TJ124T	120K 1/4W	[M]
R528	ERDS2TJ154T	150K 1/4W	[M]
R529	ERDS2TJ223T	22K 1/4W	[M]
R530	ERD25FVJ1R0T	1 1/4W	[M]
R531	ERD25FVJ1R0T	1 1/4W	[M]
R532	ERDS2TJ472T	4.7K 1/4W	[M]
R533	ERDS1FVJ100T	10 1/2W	[M]
R534	ERDS1FVJ100T	10 1/2W	[M]
R535	ERDS1FVJ100T	10 1/2W	[M]
R536	ERDS1FVJ100T	10 1/2W	[M]
R537	ERDS1FVJ100T	10 1/2W	[M]
R538	ERDS1FVJ100T	10 1/2W	[M]
R545	ERDS2TJ224T	220K 1/4W	[M]
R546	ERDS2TJ102T	1K 1/4W	[M]
R547	ERDS2TJ394T	390K 1/4W	[M]
R548	ERDS2TJ334T	330K 1/4W	[M]
R549	ERDS2TJ392T	3.9K 1/4W	[M]
R558	ERDS2TJ104T	100K 1/4W	[M]
R559	ERDS2TJ103T	10K 1/4W	[M]
R560	ERDS2TJ151T	150 1/4W	[M]
R561	ERDS1FVJ392T	3.9K 1/2W	[M]
R562	ERDS2TJ472T	4.7K 1/4W	[M]
R563	ERDS1FVJ102T	1K 1/2W	[M]
R564	ERDS2TJ224T	220K 1/4W	[M]
R565	ERDS1FVJ392T	3.9K 1/2W	[M]
R567	ERDS1FVJ152T	1.5K 1/2W	[M]
R568	ERDS2TJ151T	150 1/4W	[M]
R569	ERDS1FVJ182T	1.8K 1/2W	[M]
R570	ERDS2TJ103T	10K 1/4W	[M]
R571	ERDS1FVJ182T	1.8K 1/2W	[M]
R577	ERDS2TJ152T	1.5K 1/4W	[M]
R578	ERDS2TJ103T	10K 1/4W	[M]
R579	ERDS2TJ332T	3.3K 1/4W	[M]
R580	ERDS2TJ220T	22 1/4W	[M]
R581	ERDS2TJ682T	6.8K 1/4W	[M]
R582	ERDS2TJ224T	220K 1/4W	[M]
R583	ERDS2TJ101T	100 1/4W	[M]
R584	ERDS2TJ473T	47K 1/4W	[M]
R587	ERDS2TJ272T	2.7K 1/4W	[M]
R588	ERDS2TJ824T	820K 1/4W	[M]
R589	ERDS2TJ103T	10K 1/4W	[M]
R590	ERDS2TJ102T	1K 1/4W	[M]
R600	ERDS2TJ473T	47K 1/4W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R601	ERDS2TJ473T	47K 1/4W	[M]
R602	ERDS2TJ472T	4.7K 1/4W	[M]
R603	ERDS2TJ103T	10K 1/4W	[M]
R604	ERDS2TJ225T	2.2M 1/4W	[M]
R606	ERG2SJ220E	22 2W	[M]
R609	ERDS1FVJ152T	1.5K 1/2W	[M]
R610	ERD2FCVJ4R7T	4.7 1/4W	[M]
		CAPACITORS	
C501	ECBT1H102KB5	1000P 50V	[M]
C502	ECBT1H102KB5	1000P 50V	[M]
C503	ECBT1H102KB5	1000P 50V	[M]
C504	ECBT1H102KB5	1000P 50V	[M]
C505	ECBT1H102KB5	1000P 50V	[M]
C506	ECBT1H102KB5	1000P 50V	[M]
C507	ECBT1H180JC5	18P 50V	[M]
C508	ECBT1H180JC5	18P 50V	[M]
C509	ECBT1H220JC5	22P 50V	[M]
C510	ECBT1H220JC5	22P 50V	[M]
C511	ECBT1H220JC5	22P 50V	[M]
C512	ECBT1H220JC5	22P 50V	[M]
C513	F1D1H473A012	0.047 50V	[M]
C514	ECEA0JKA101B	100 6.3V	[M]
C515	F1B2H103A060	0.01 500V	[M]
C516	F1B2H103A060	0.01 500V	[M]
C517	ECBT1C103NS5	0.01 16V	[M]
C518	F1D1H473A012	0.047 50V	[M]
C519	F1D1H473A012	0.047 50V	[M]
C520	F1D1H473A012	0.047 50V	[M]
C521	F1D1H473A012	0.047 50V	[M]
C522	F1D1H473A012	0.047 50V	[M]
C523	F1D1H473A012	0.047 50V	[M]
C529	F1D1H1040002	0.1 50V	[M]
C530	ECBT1H102KB5	1000P 50V	[M]
C531	ECBT1H102KB5	1000P 50V	[M]
C532	ECBT1H102KB5	1000P 50V	[M]
C533	ECBT1H102KB5	1000P 50V	[M]
C534	ECA1HM330B	33 50V	[M]
C543	ECBT1H102KB5	1000P 50V	[M]
C544	ECA1HM101B	100 50V	[M]
C545	F1D1H1040002	0.1 50V	[M]
C546	ECA1SM332C5	3300 100V	[M]
C547	ECA1SM472C5	4700 100V	[M]
C548	ECA1SM472C5	4700 100V	[M]
C549	ECA1SM332C5	3300 100V	[M]
C550	ECBT1C103NS5	0.01 16V	[M]
C551	ECBT1H103KB5	0.01 50V	[M]
C553	ECQE1104KF3	0.1 100V	[M]
C554	ECQE1104KF3	0.1 100V	[M]
C555	ECEA1VKA4R7B	4.7 35V	[M]
C556	ECBT1H103KB5	0.01 50V	[M]
C557	ECEA1AKA101B	100 10V	[M]
C558	ECA1EM102B	1000 25V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C559	ECBT1H103KB5	0.01 50V	[M]
C560	ECA1HM100B	10 50V	[M]
C569	F1D1H473A012	0.047 50V	[M]
C570	ECA1EM331B	330 25V	[M]
C571	ECA1EM102B	1000 25V	[M]
C572	ECA1HM101B	100 50V	[M]
C573	ECBT1H102KB5	1000P 50V	[M]
C574	ECBT1H103KB5	0.01 50V	[M]
C575	ECBT1H103KB5	0.01 50V	[M]
C576	F2J1H100A048	10P 50V	[M]
C577	ECEA1CKA100B	10 16V	[M]
C578	ECBT1H103KB5	0.01 50V	[M]
C579	ECBT1H103KB5	0.01 50V	[M]
C580	ECEA1HKA2R2B	2.2 50V	[M]
C581	ECBT1H103KB5	0.01 50V	[M]
C647	ECA0JM471B	470 6.3V	[M]

15.3. Packing Materials & Accessories Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PACKING MATERIALS	
P1	RPNX0317	POLYFOAM	[M]
P2	RPFX0071	MIRAMAT BAG	[M]

15.4. Packaging

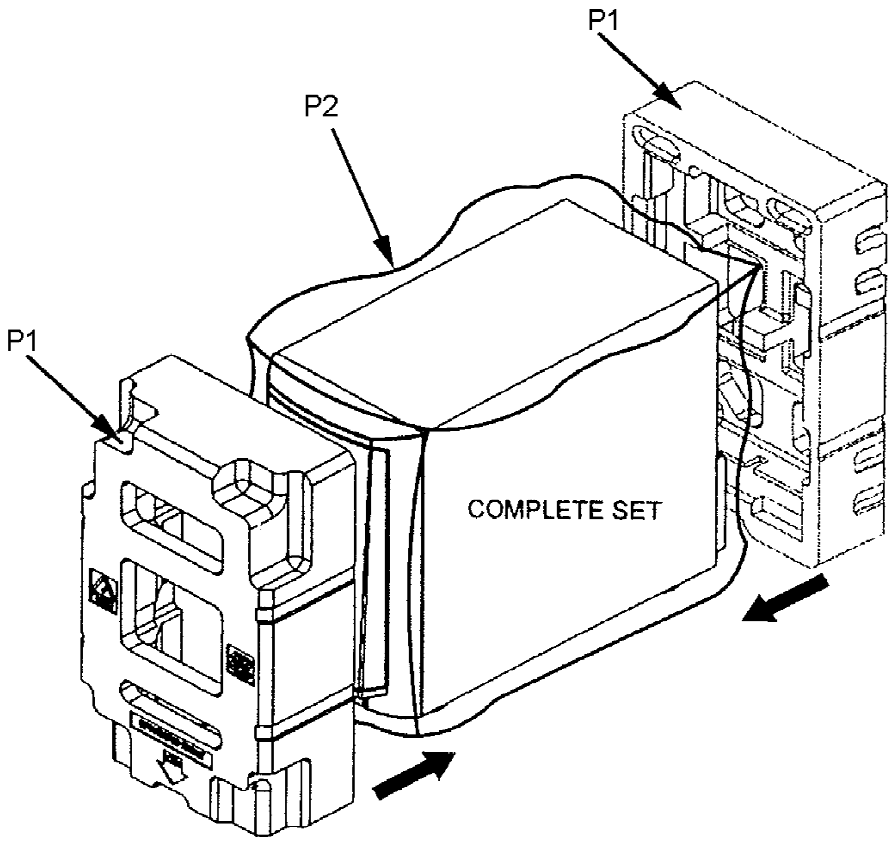

FLE0503/J/A/S/E/N

B AC INLET P.C.B (REPX0482B)

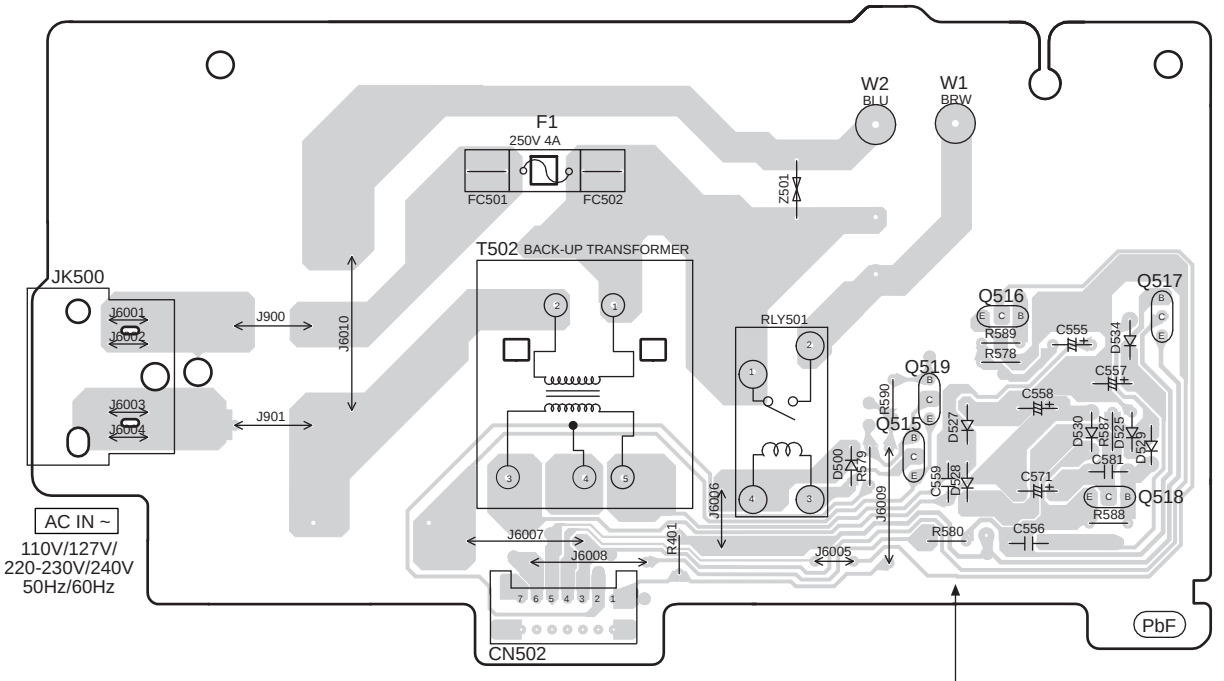

C TRANSFORMER P.C.B (REPX0482B)

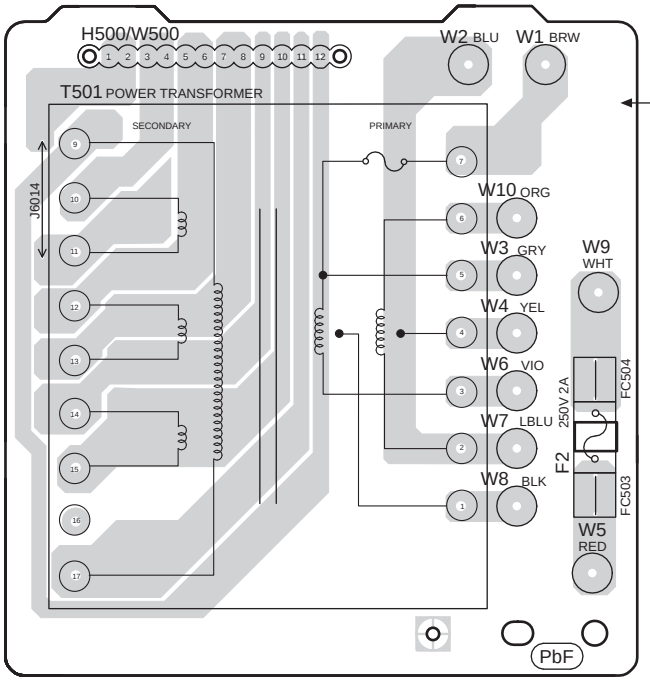

CAUTION
RISK OF ELECTRIC SHOCK
AC VOLTAGE LINE.
PLEASE DO NOT TOUCH THIS P.C.B

D VOLTAGE SELECTOR P.C.B (REPX0482B)

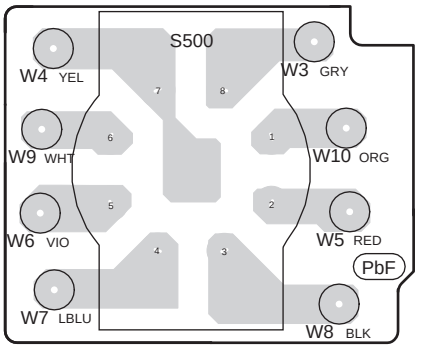

SCHEMATIC DIAGRAM-1

A POWER CIRCUIT

– – – : -B SIGNAL LINE
——— : +B SIGNAL LINE
⇨ : MAIN SIGNAL LINE

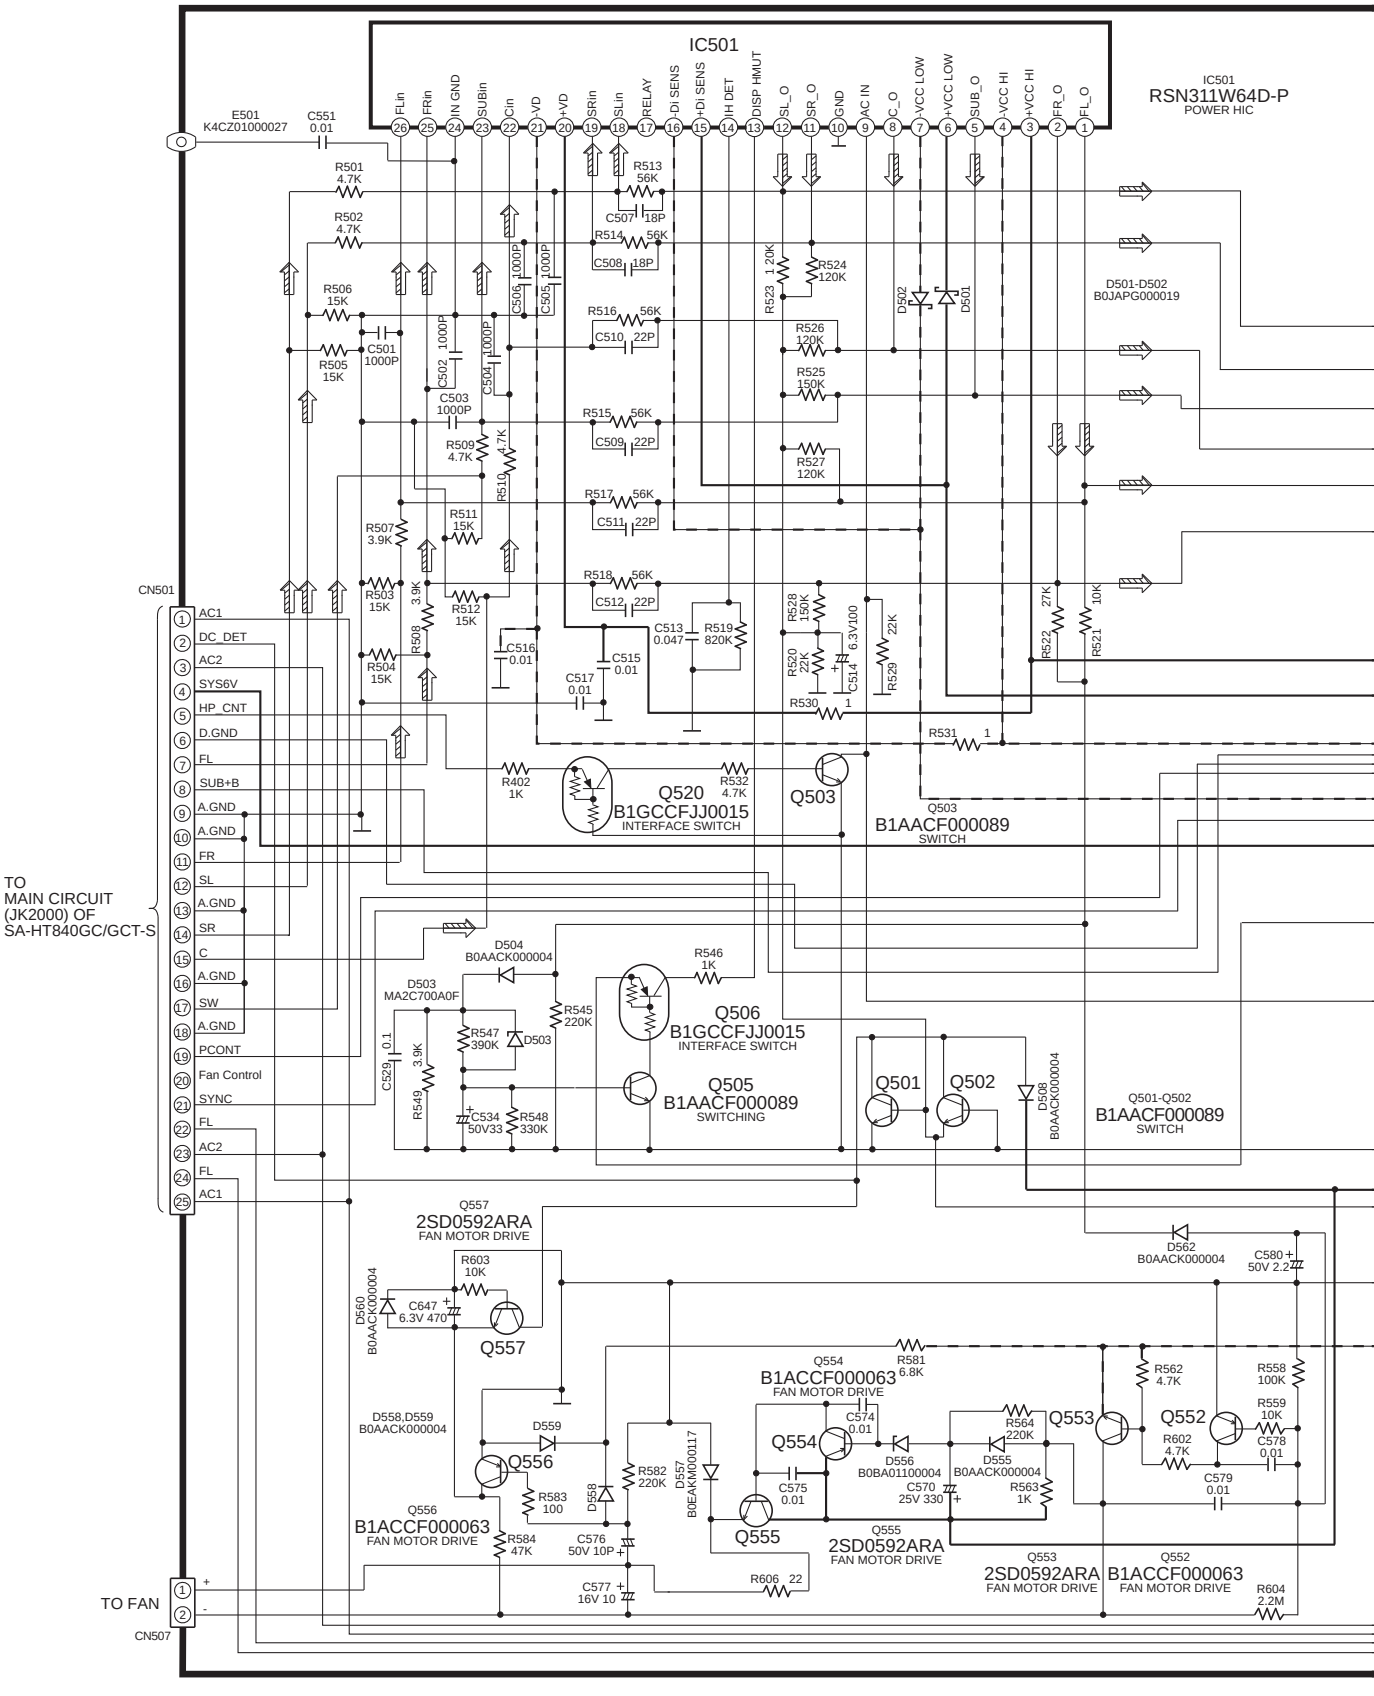

SCHEMATIC DIAGRAM-2

A POWER CIRCUIT

: -B SIGNAL LINE
: +B SIGNAL LINE
: MAIN SIGNAL LINE

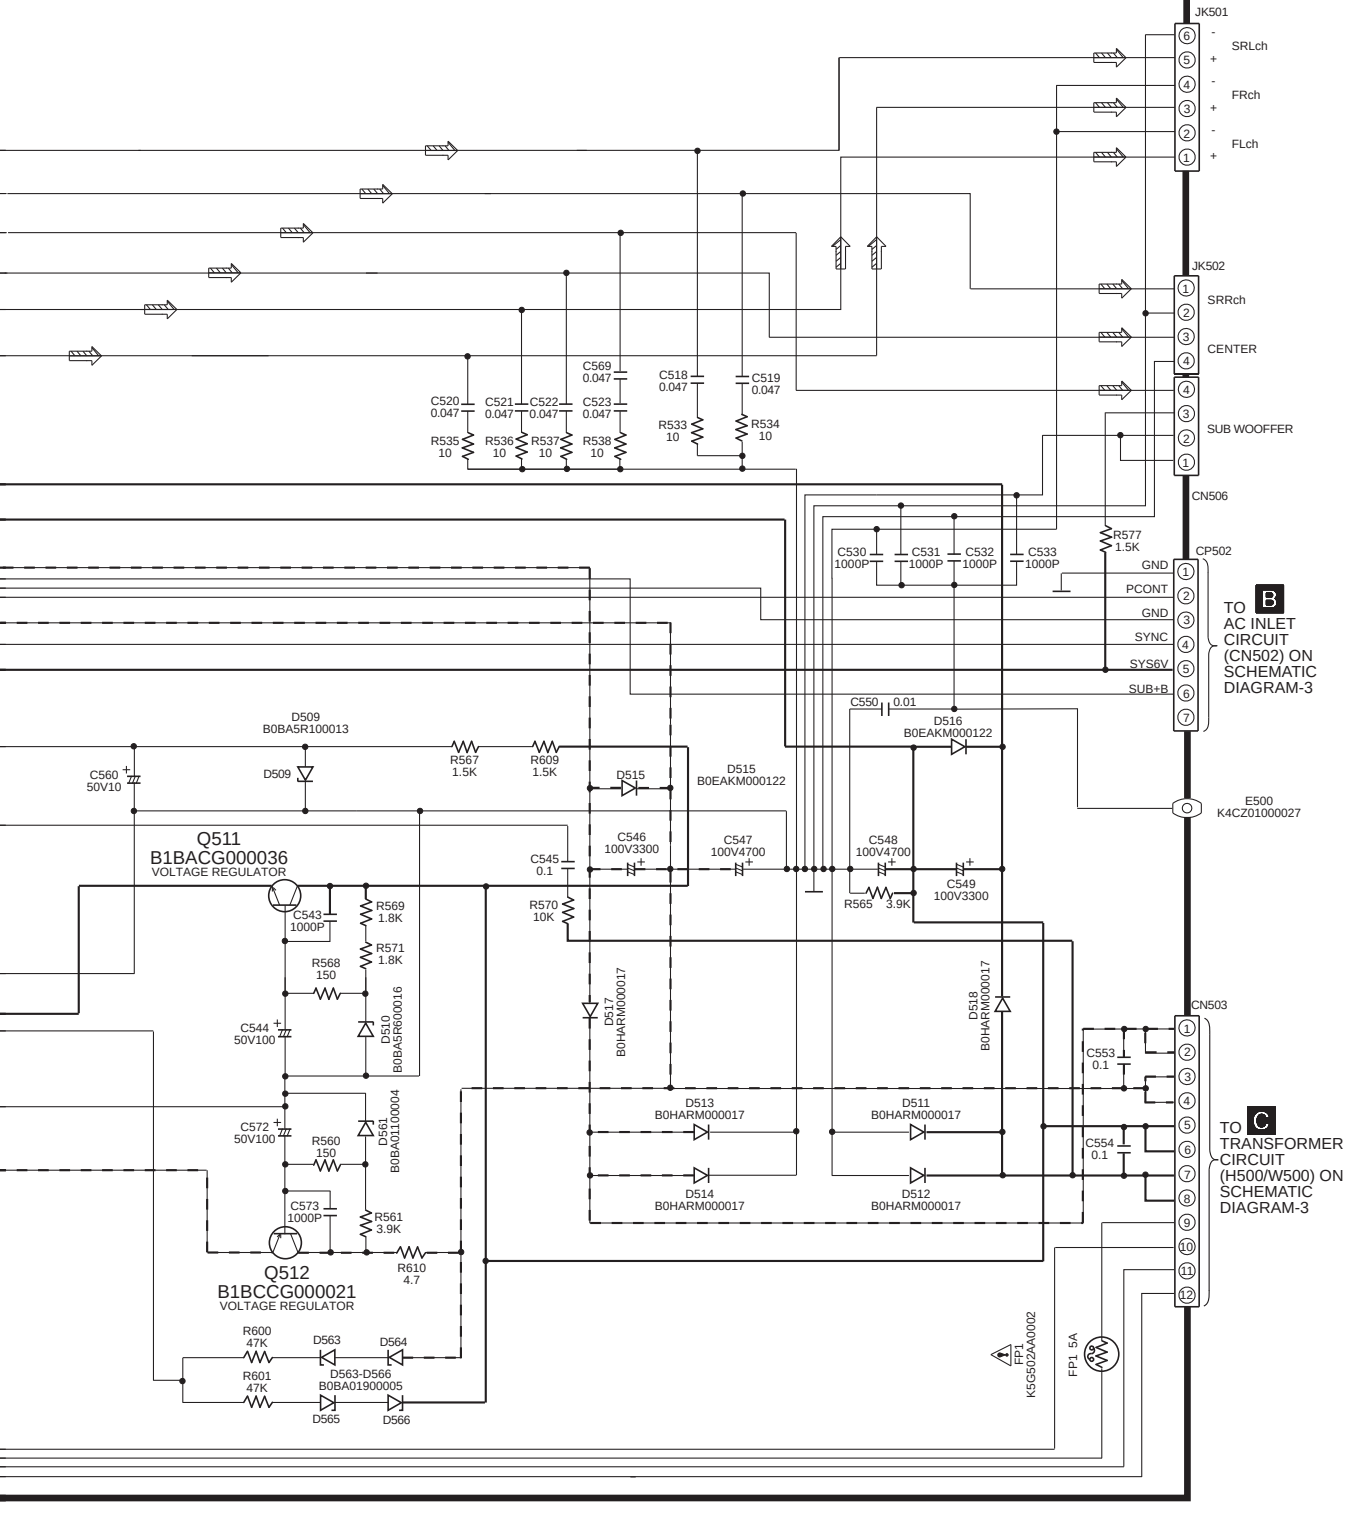

SCHEMATIC DIAGRAM-3

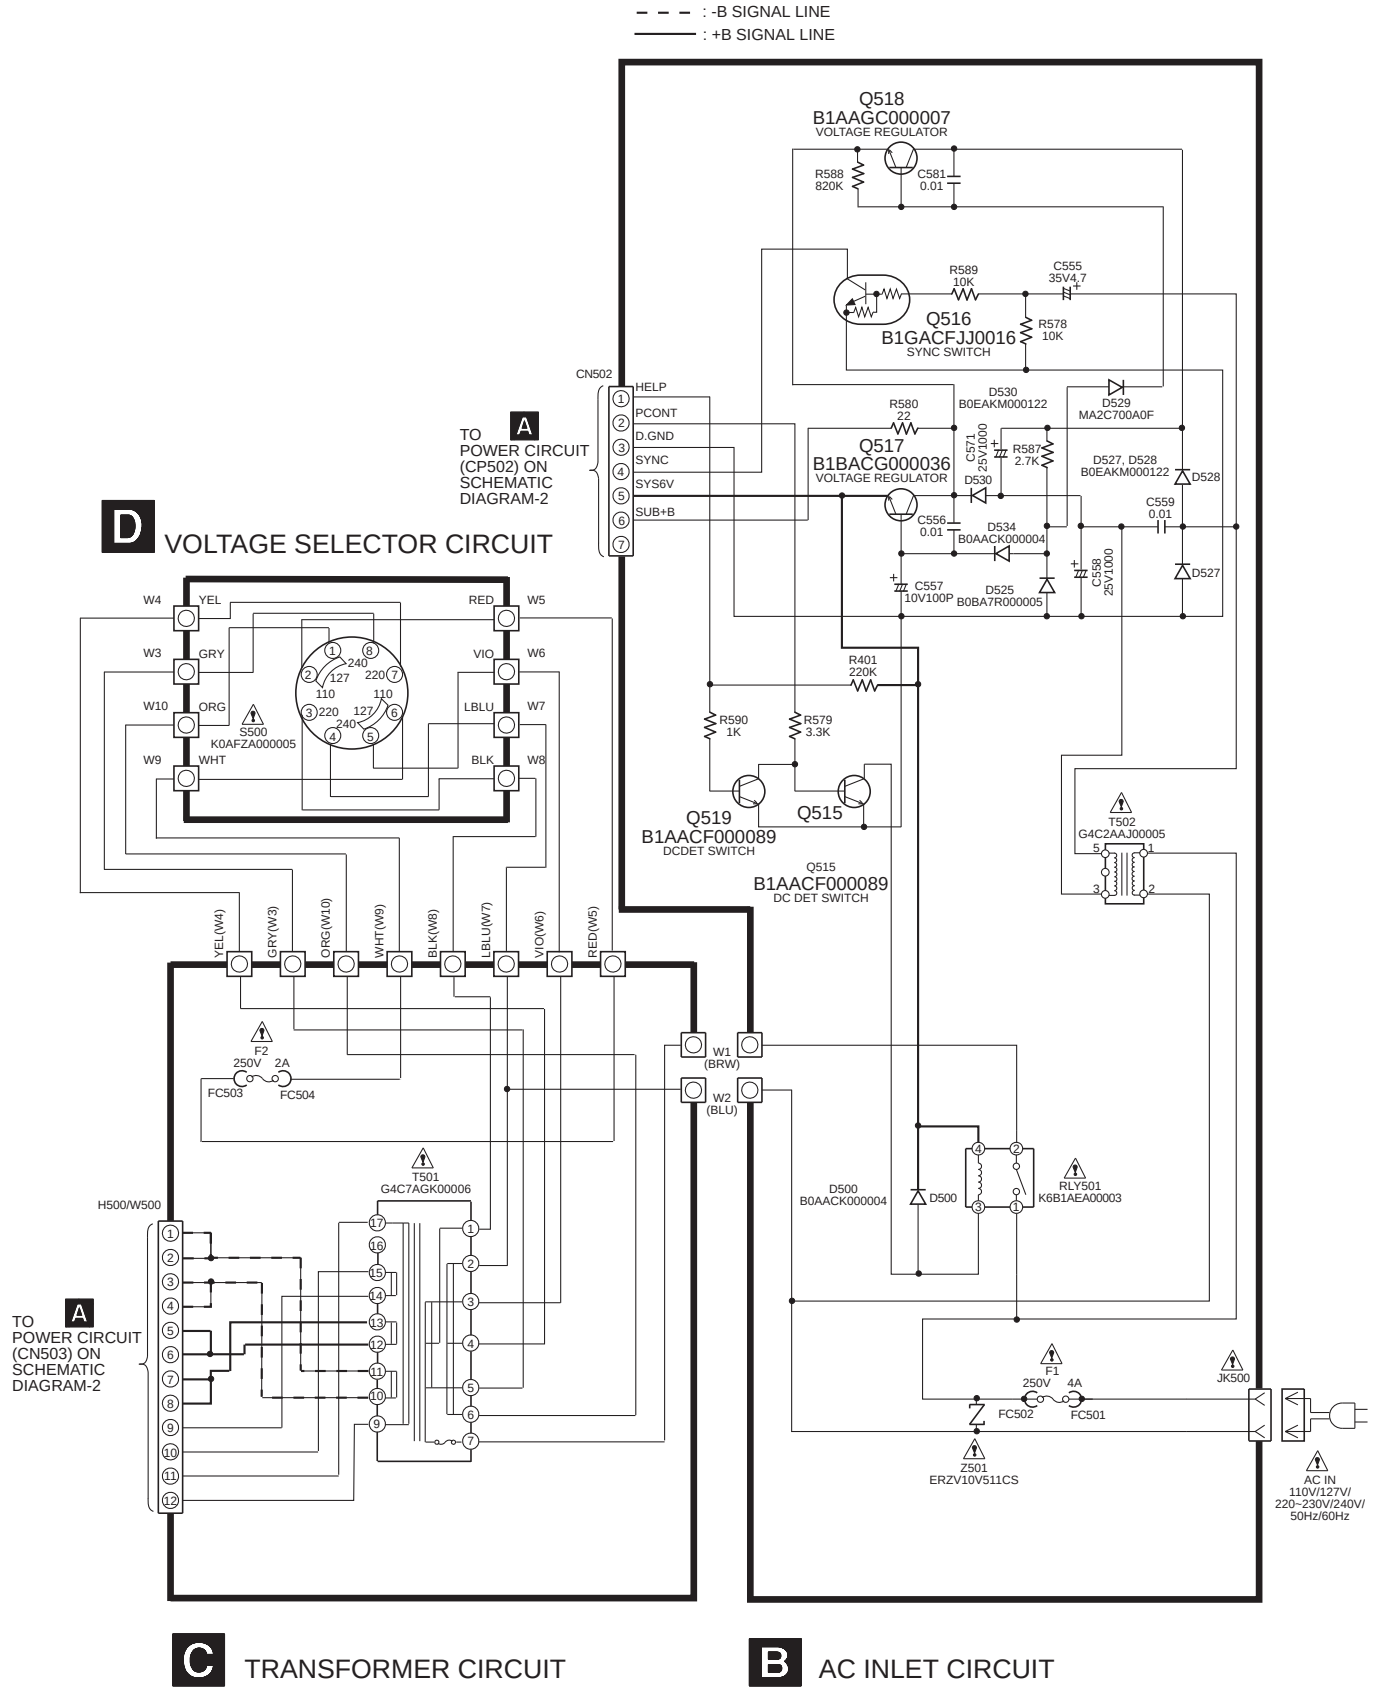

INLET P.C.B.

Ref No.	Q515				Q516				Q517				Q519							
MODE	E	C	B		E	C	B		E	C	B		E	C	B					
CD PLAY	0	0.1	0.8		0	2.8	-1.1		5.9	12.5	6.5		0	0.8	0					
STANDBY	0	6.0	0		0	2.9	-1.1		6.1	12.6	6.6		0	0	0					

TRANSFORMER P.C.B.

Ref No.	IC501																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	0	62.1	-62.2	0	30.5	-30.6	0	0	0	0	0	0	-0.2	30.8	-30.8	-10.5	0	0	62.1
STANDBY	0	0	15.0	0.4	0	0	0.1	0	0	0	0	0	0	0	-0.2	0.1	0	0	0	15.0

Ref No.	IC501																			
MODE	21	22	23	24	25	26														
CD PLAY	-61.8	0	0	0	0	0														
STANDBY	0.4	0	0	0	0	0														

Ref No.	Q501				Q502				Q503				Q505				Q506			
MODE	E	C	B		E	C	B		1	2	3		E	C	B		E	C	B	
CD PLAY	0	5.1	0		0	5.1	0		0	0	-1.5		0	0.8	0		0.8	0	0.8	
STANDBY	0	0.7	0		0	0.7	0		0	0	-0.2		0	-0.3	0		-0.3	0	-0.3	

Ref No.	Q511				Q512				Q520				Q552				Q553			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	5.1	30.8	5.6		-11.3	-30.8	-11.8		0	-1.6	0		0	-11.2	0.2		-11.2	5.0	-11.2	
STANDBY	0.4	-0.2	-0.2		0	0.1	0		0	-0.2	0		0	0	0		0	0.4	0	

Ref No.	Q554				Q555				Q556				Q557							
MODE	E	C	B		E	C	B		E	C	B		E	C	B					
CD PLAY	5.1	-	4.6		4.7	5.1	-		0	0.4	-0.2		0.4	5.1	0					
STANDBY	0.4	0	0.1		0.5	0.4	0		0	0.3	0		0.3	0.7	0					

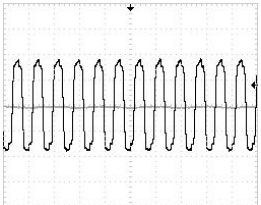

CN501 PIN 1
CD PLAY
18.2Vp-p (25msec.div)

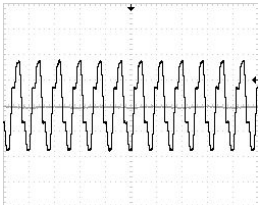

CN501 PIN 3
CD PLAY
18.0Vp-p (25msec.div)

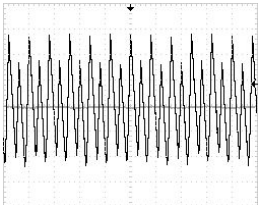

CN501 PIN 8
CD PLAY
1.04Vp-p (25msec.div)

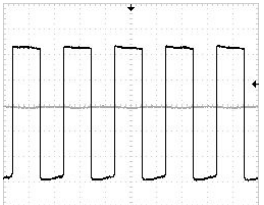

CN501 PIN 21
CD PLAY
5.32Vp-p (10msec.div)

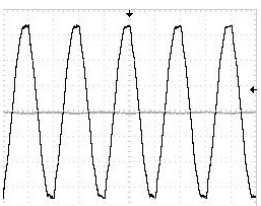

CN501 PIN 22
CD PLAY
6.84Vp-p (10msec.div)

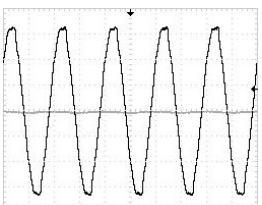

CN501 PIN 24
CD PLAY
6.60Vp-p (10msec.div)

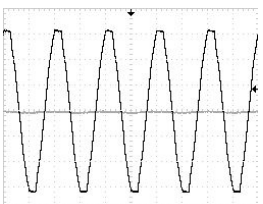

CN503 PIN 1
CD PLAY
63.6Vp-p (10msec.div)

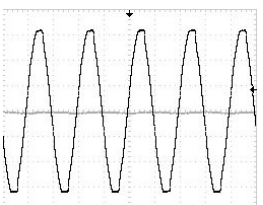

CN503 PIN 7
CD PLAY
64.0Vp-p (10msec.div)

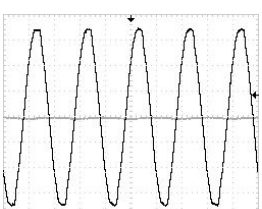

CN503 PIN 11
CD PLAY
7.00Vp-p (10msec.div)

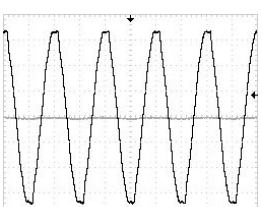

CN503 PIN 12
CD PLAY
6.80Vp-p (10msec.div)

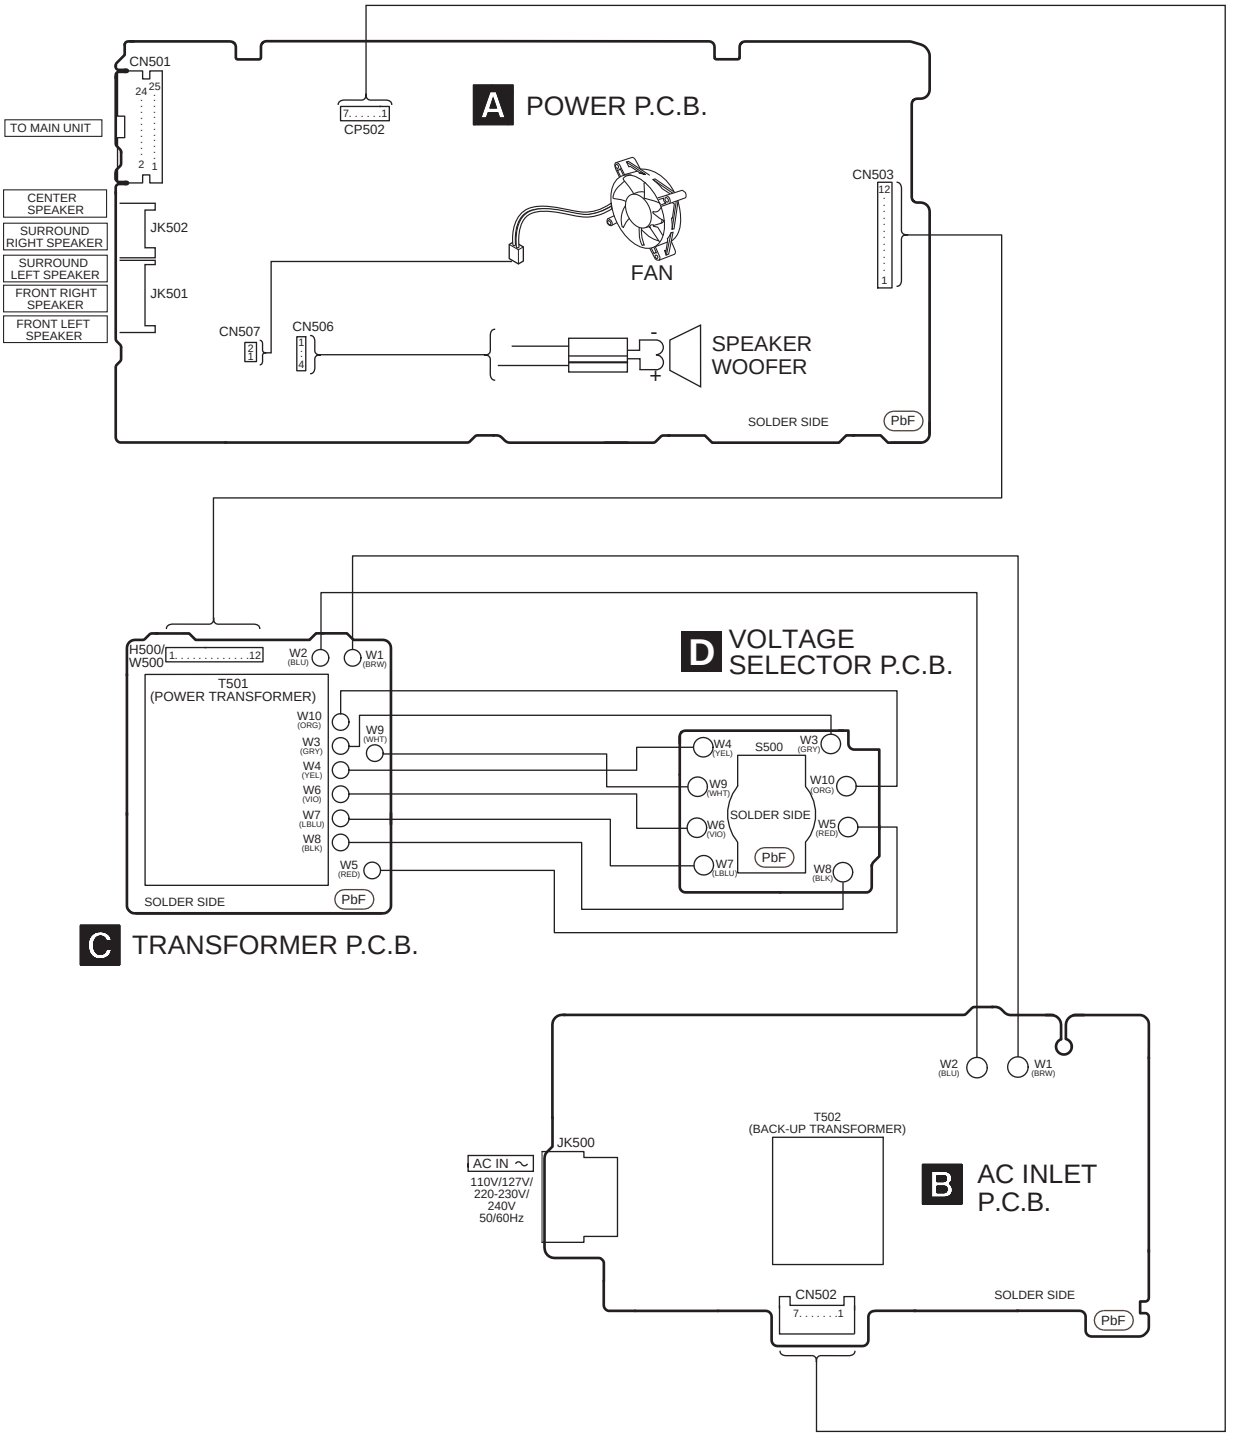
A POWER P.C.B.
CN501
24
25
2
1
TO MAIN UNIT
CENTER SPEAKER
SURROUND RIGHT SPEAKER
SURROUND LEFT SPEAKER
FRONT RIGHT SPEAKER
FRONT LEFT SPEAKER
JK502
JK501
CP502
7.....1
FAN
CN503
12
1
CN507
2
1
CN506
1
4
SPEAKER WOOFER
SOLDER SIDE
PbF
D VOLTAGE SELECTOR P.C.B.
H500/ W500
1.....12
W2 (BLU)
W1 (BRW)
T501 (POWER TRANSFORMER)
W10 (ORG)
W3 (GRY)
W4 (YEL)
W6 (VIO)
W7 (LBLU)
W8 (BLK)
W9 (WHT)
W5 (RED)
SOLDER SIDE
PbF
S500
W4 (YEL)
W3 (GRY)
W9 (WHT)
W10 (ORG)
W6 (VIO)
W5 (RED)
W7 (LBLU)
W8 (BLK)
SOLDER SIDE
PbF
C TRANSFORMER P.C.B.
W2 (BLU)
W1 (BRW)
T502 (BACK-UP TRANSFORMER)
JK500
AC IN ~
110V/127V/ 220-230V/ 240V 50/60Hz
B AC INLET P.C.B.
CN502
7.....1
SOLDER SIDE
PbF

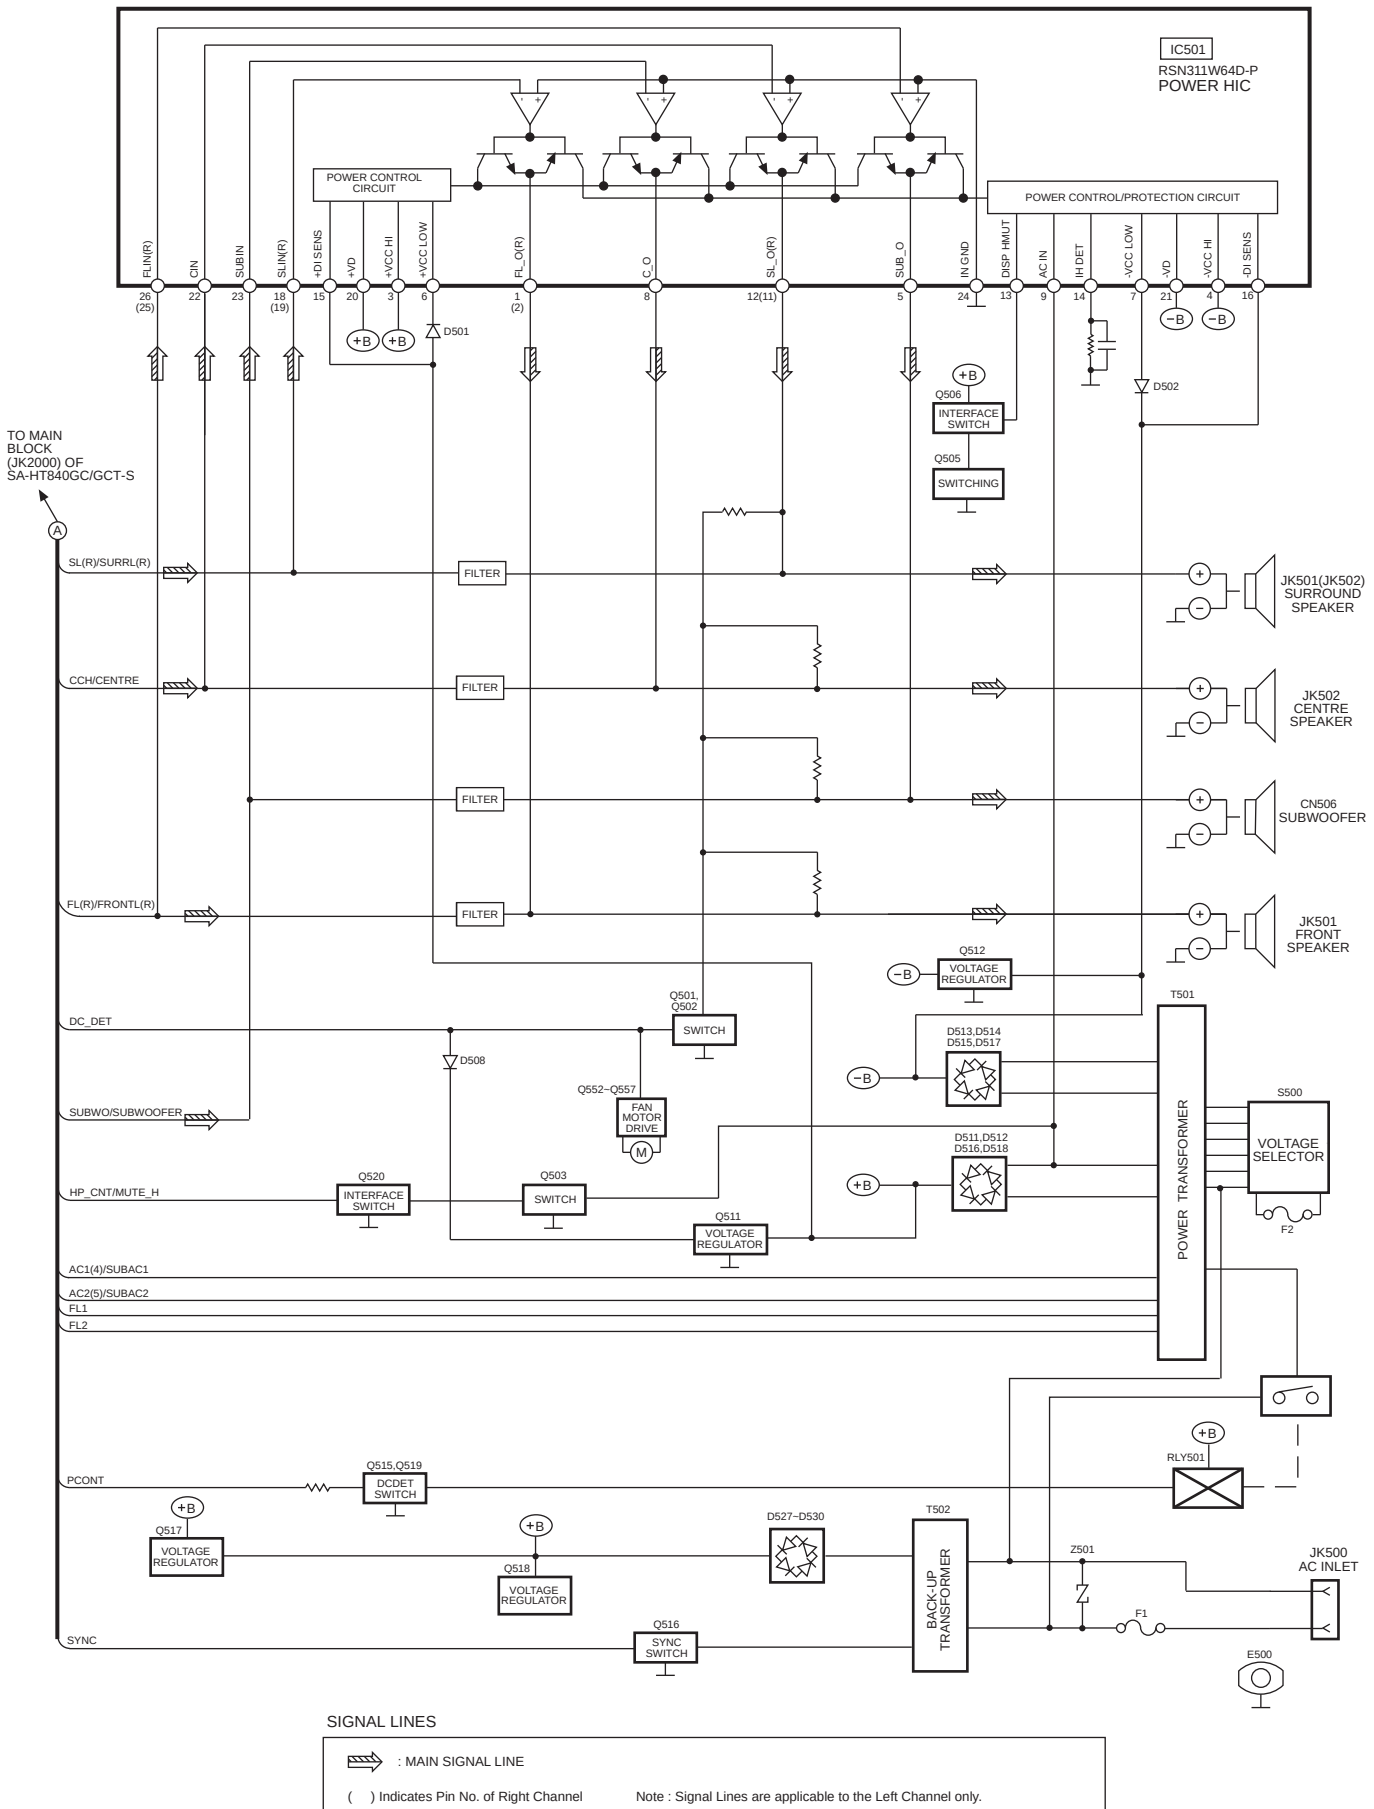

SIGNAL LINES

: MAIN SIGNAL LINE

( ) Indicates Pin No. of Right Channel

Note : Signal Lines are applicable to the Left Channel only.

RSN311W64D-P 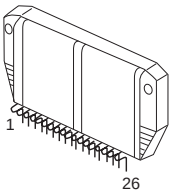	B1GCCFJJ0015 B1GACFJJ0016 B1AACF000089 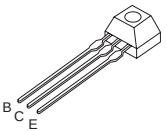	B1ACCF000063 	B1BCCG000021 B1BACG000036 	2SD0592ARA 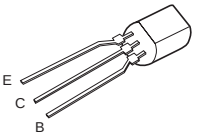
B1AAGC000007 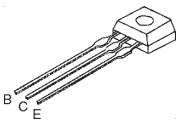	B0BA5R100013 	B0HARM000017 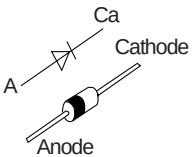	B0BA01900005 B0BA01100004 B0BA5R600016 B0BA7R000005 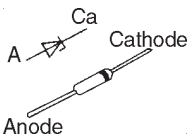	B0JAPG000019 B0EAKM000117 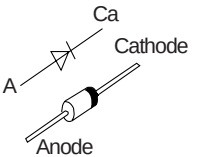
B0AACK000004 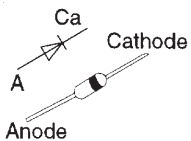	B0EAKM000122 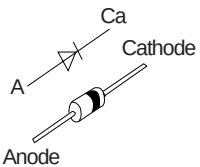	MA2C700A0F 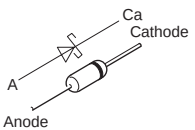		

A POWER P.C.B (REPX0482B)

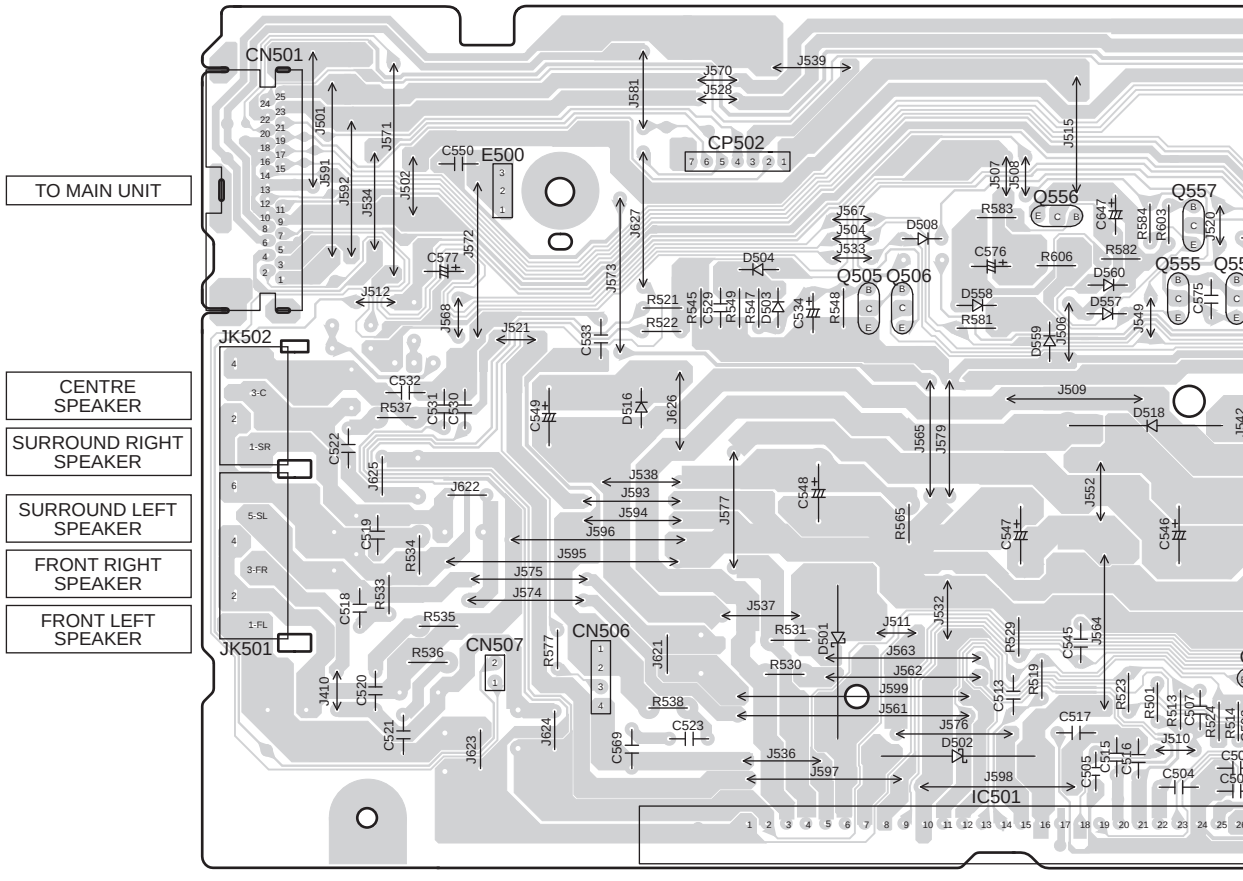

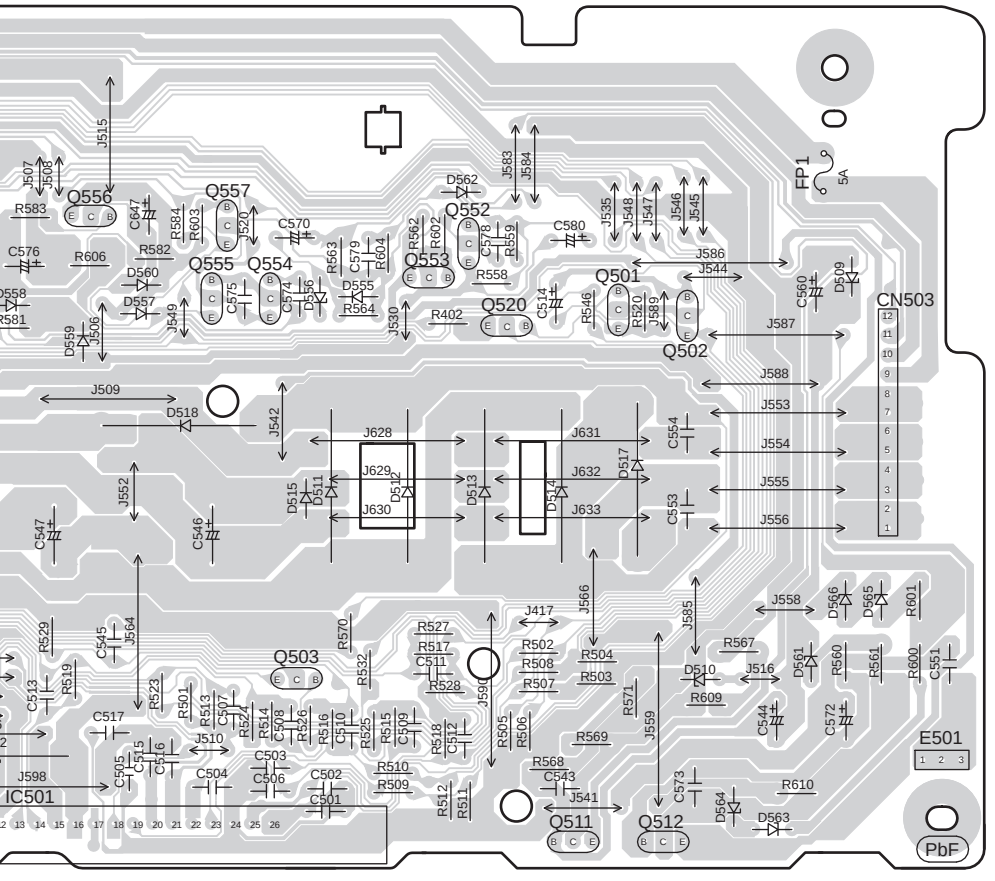
G
H
I
J
K
L
M
FP1
5A
CN503
E501
IC501
Q501
Q502
Q503
Q511
Q512
Q520
Q552
Q553
Q554
Q555
Q556
Q557
PbF